



Beta

RSC50 MA

050001222

Ricambi / Spare parts

		
①	050001912	1
②	0500020XX	1*
③	050001901	1 (4 pezzi / 4pieces)

*XX=Key codes from F00 to F19

