


Beta

RSC50 ML

050001244

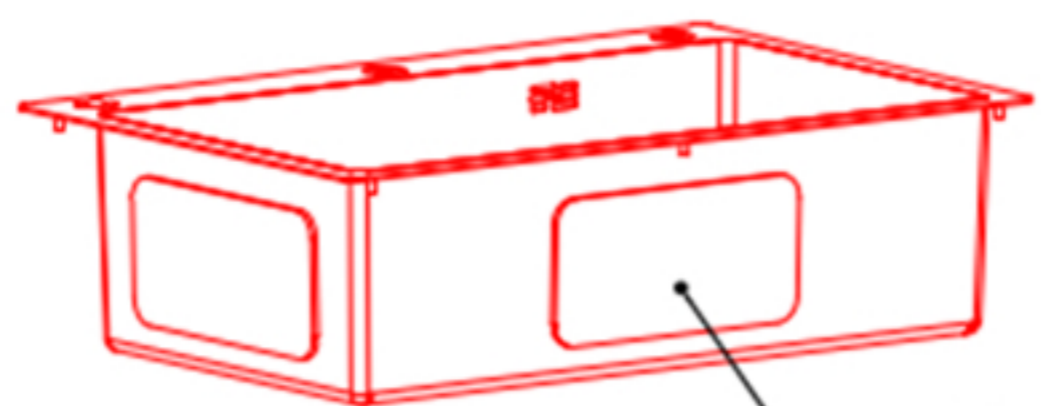


3




5



4

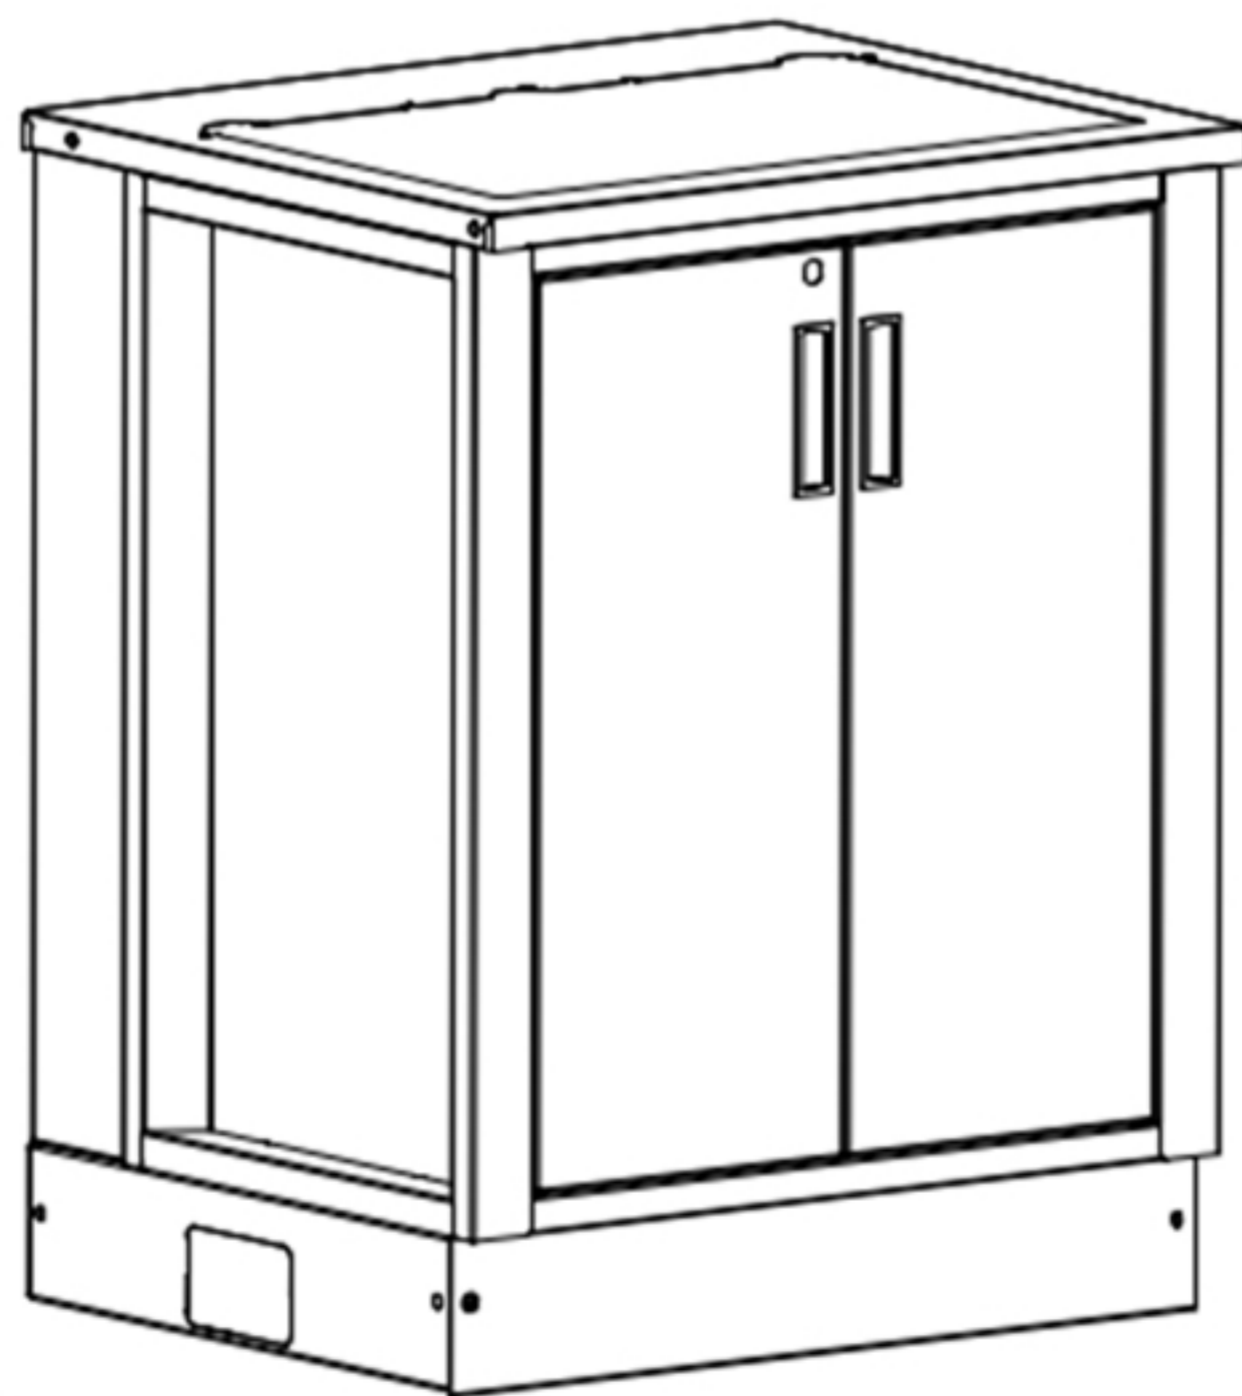

2

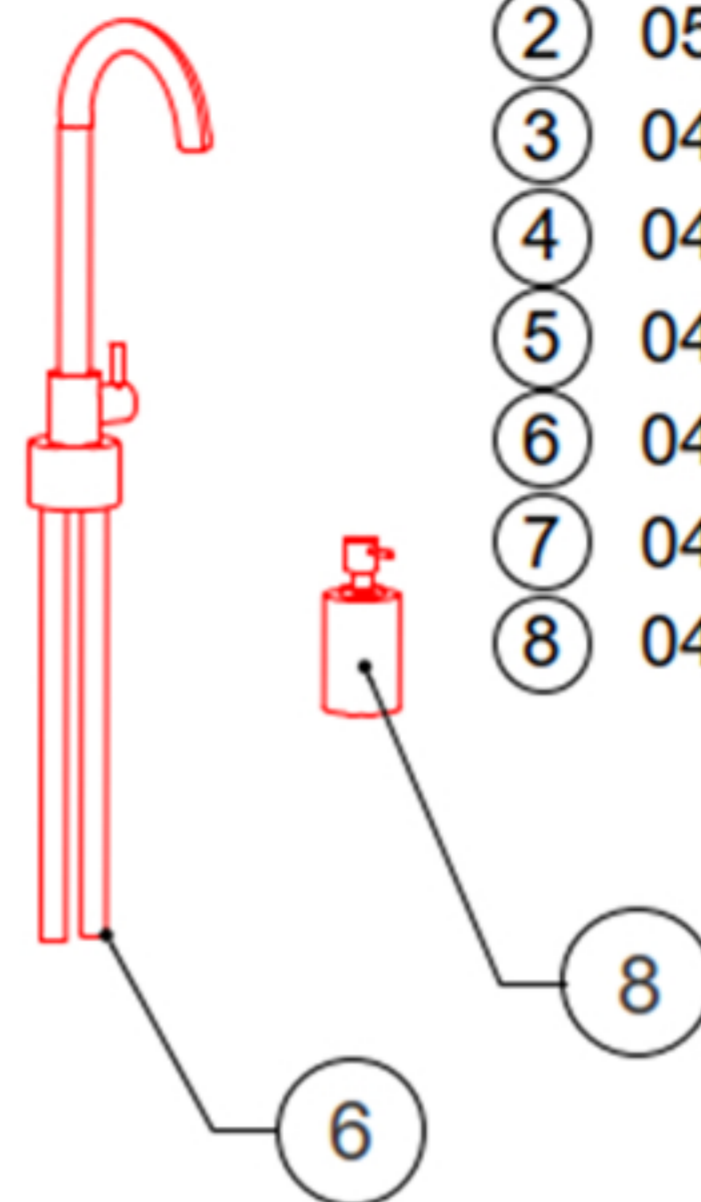



6

6

7

1

Ricambi / Spare parts

| |  |  |
|---|---|---|
| ① | 0500020XX | 1* |
| ② | 050001901 | 1 (4 pezzi / 4pieces) |
| ③ | 045001034 | 1 |
| ④ | 045001035 | 1 |
| ⑤ | 045001036 | 1 |
| ⑥ | 045001037 | 1 |
| ⑦ | 045001038 | 1 |
| ⑧ | 045001039 | 1 |

*XX=Key codes from F00 to F19

