




Beta

RSC50 PS

050001360

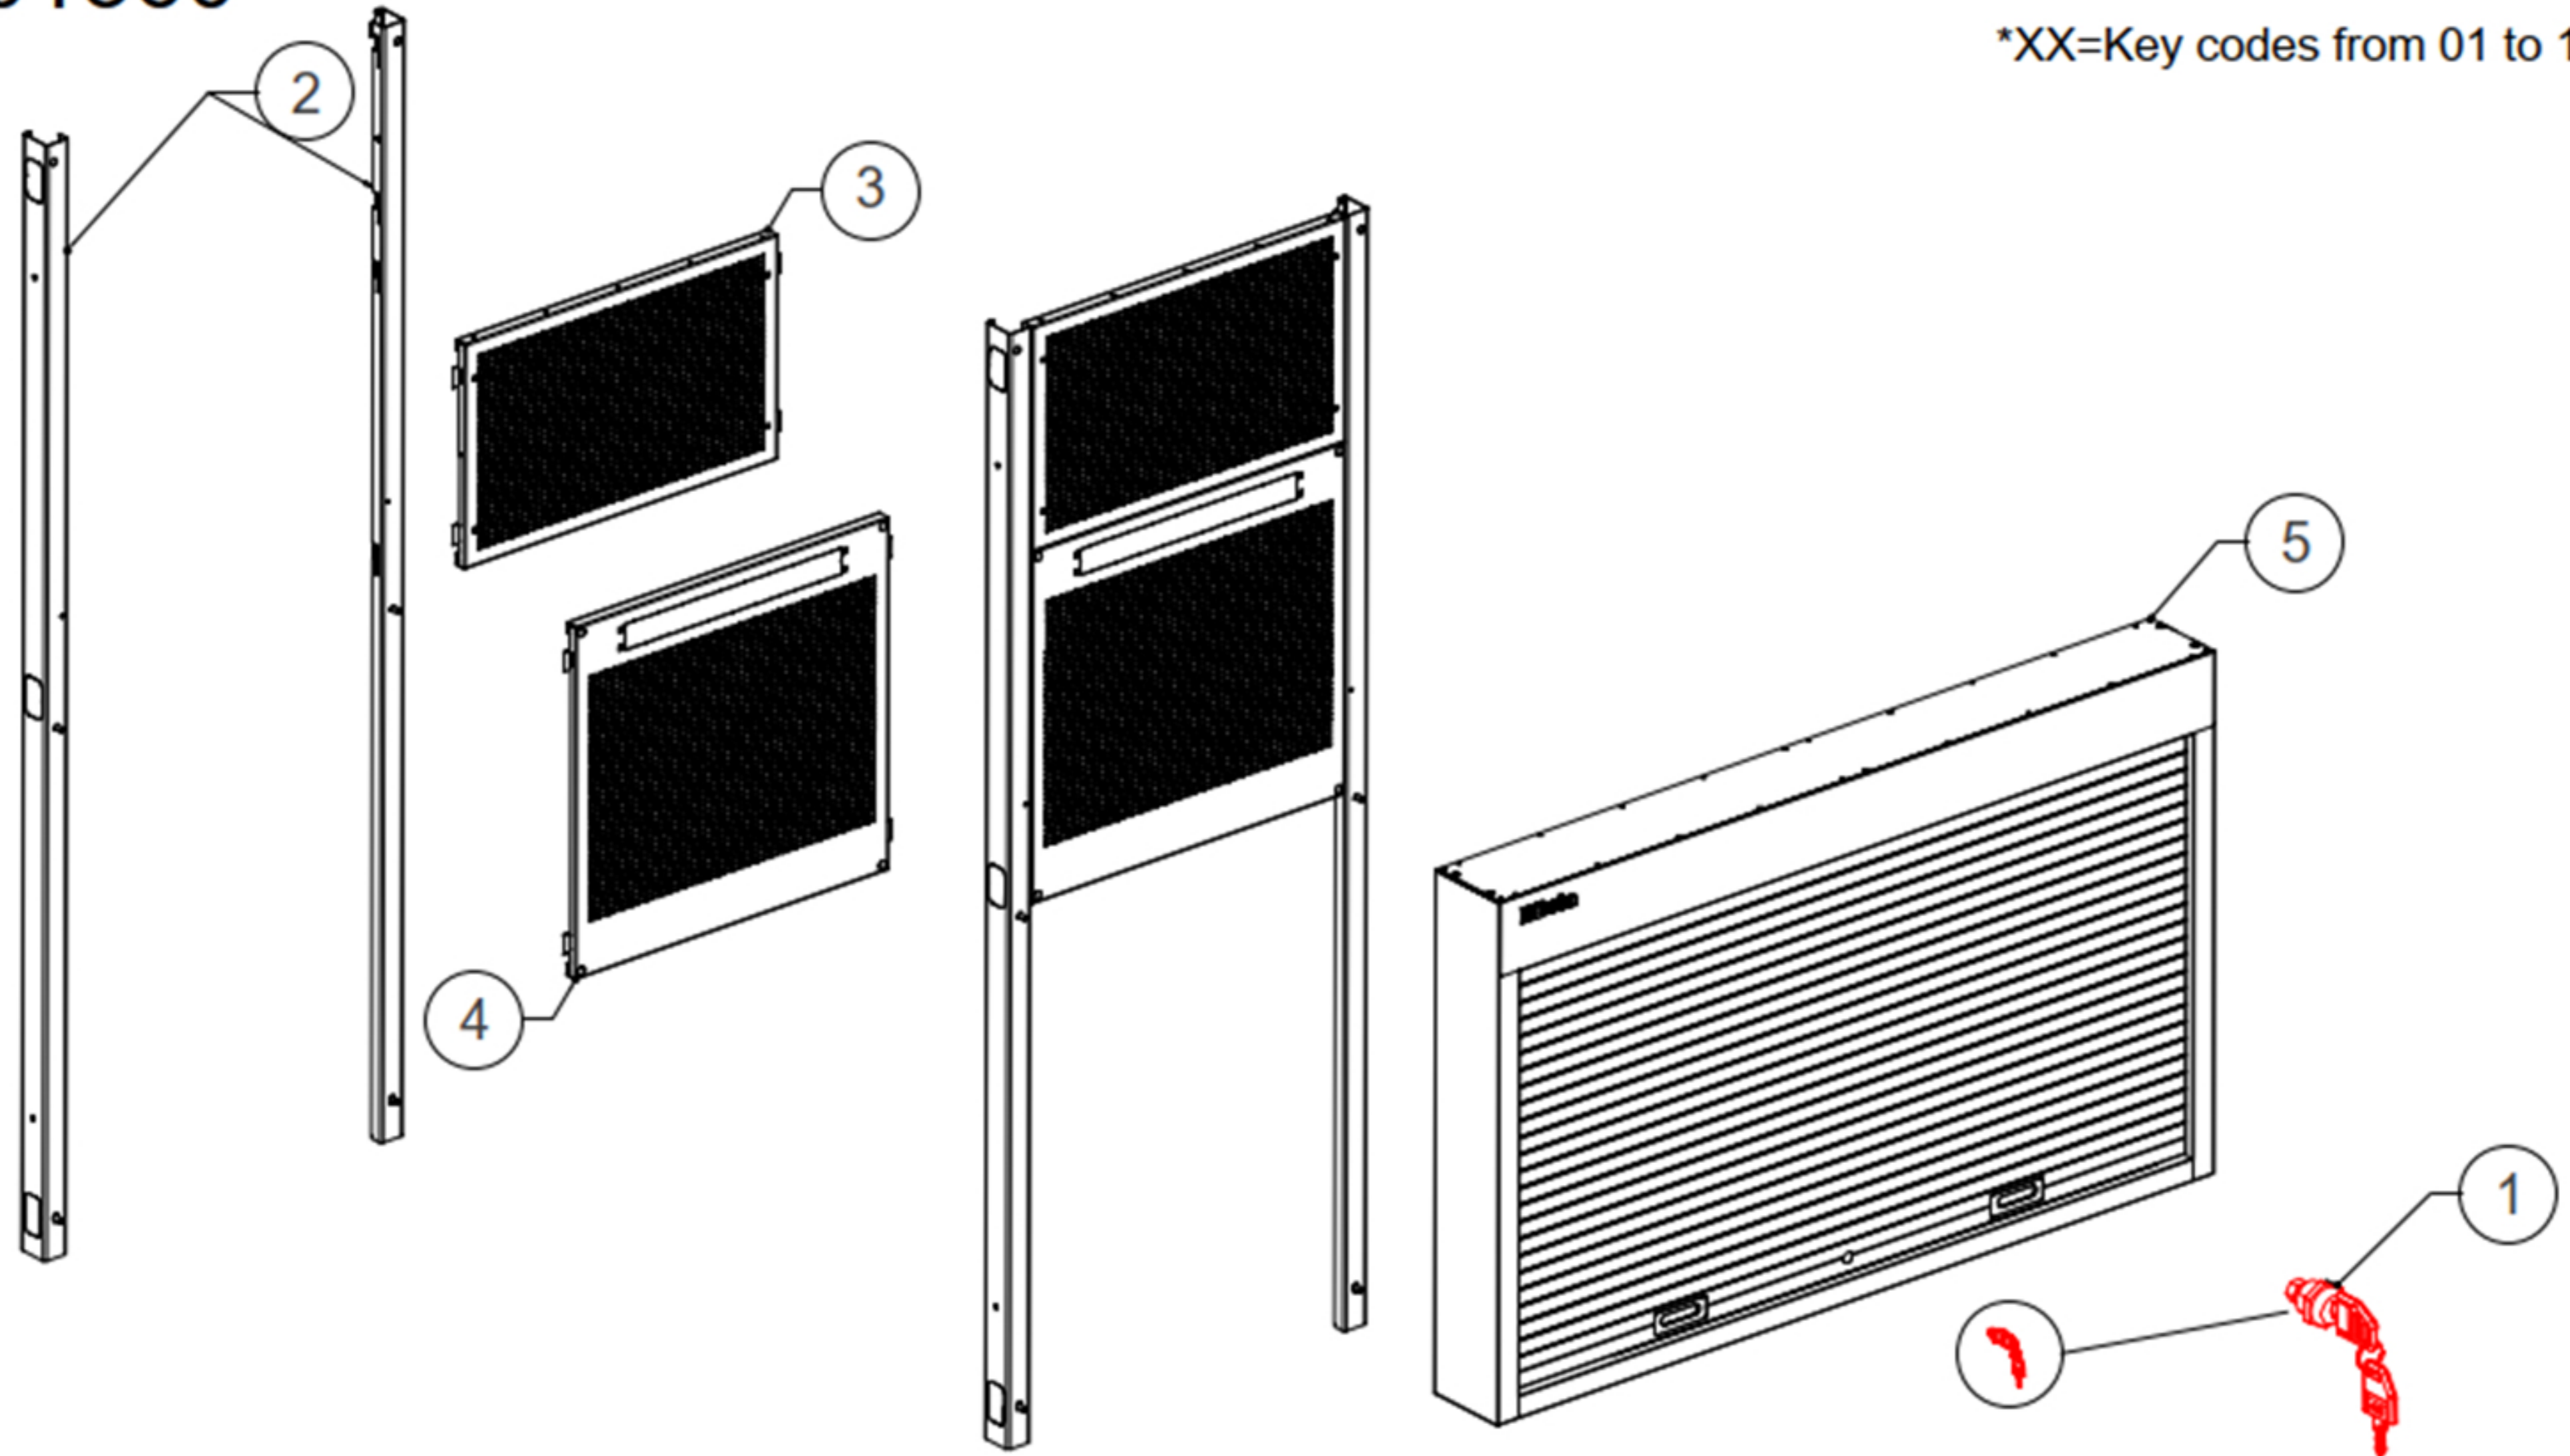

Ricambi / Spare parts

		
①	0450012XX	1*
②	050001352	1
③	050001312	1
④	050001313	1
⑤	050001359	1

*XX=Key codes from 01 to 16