




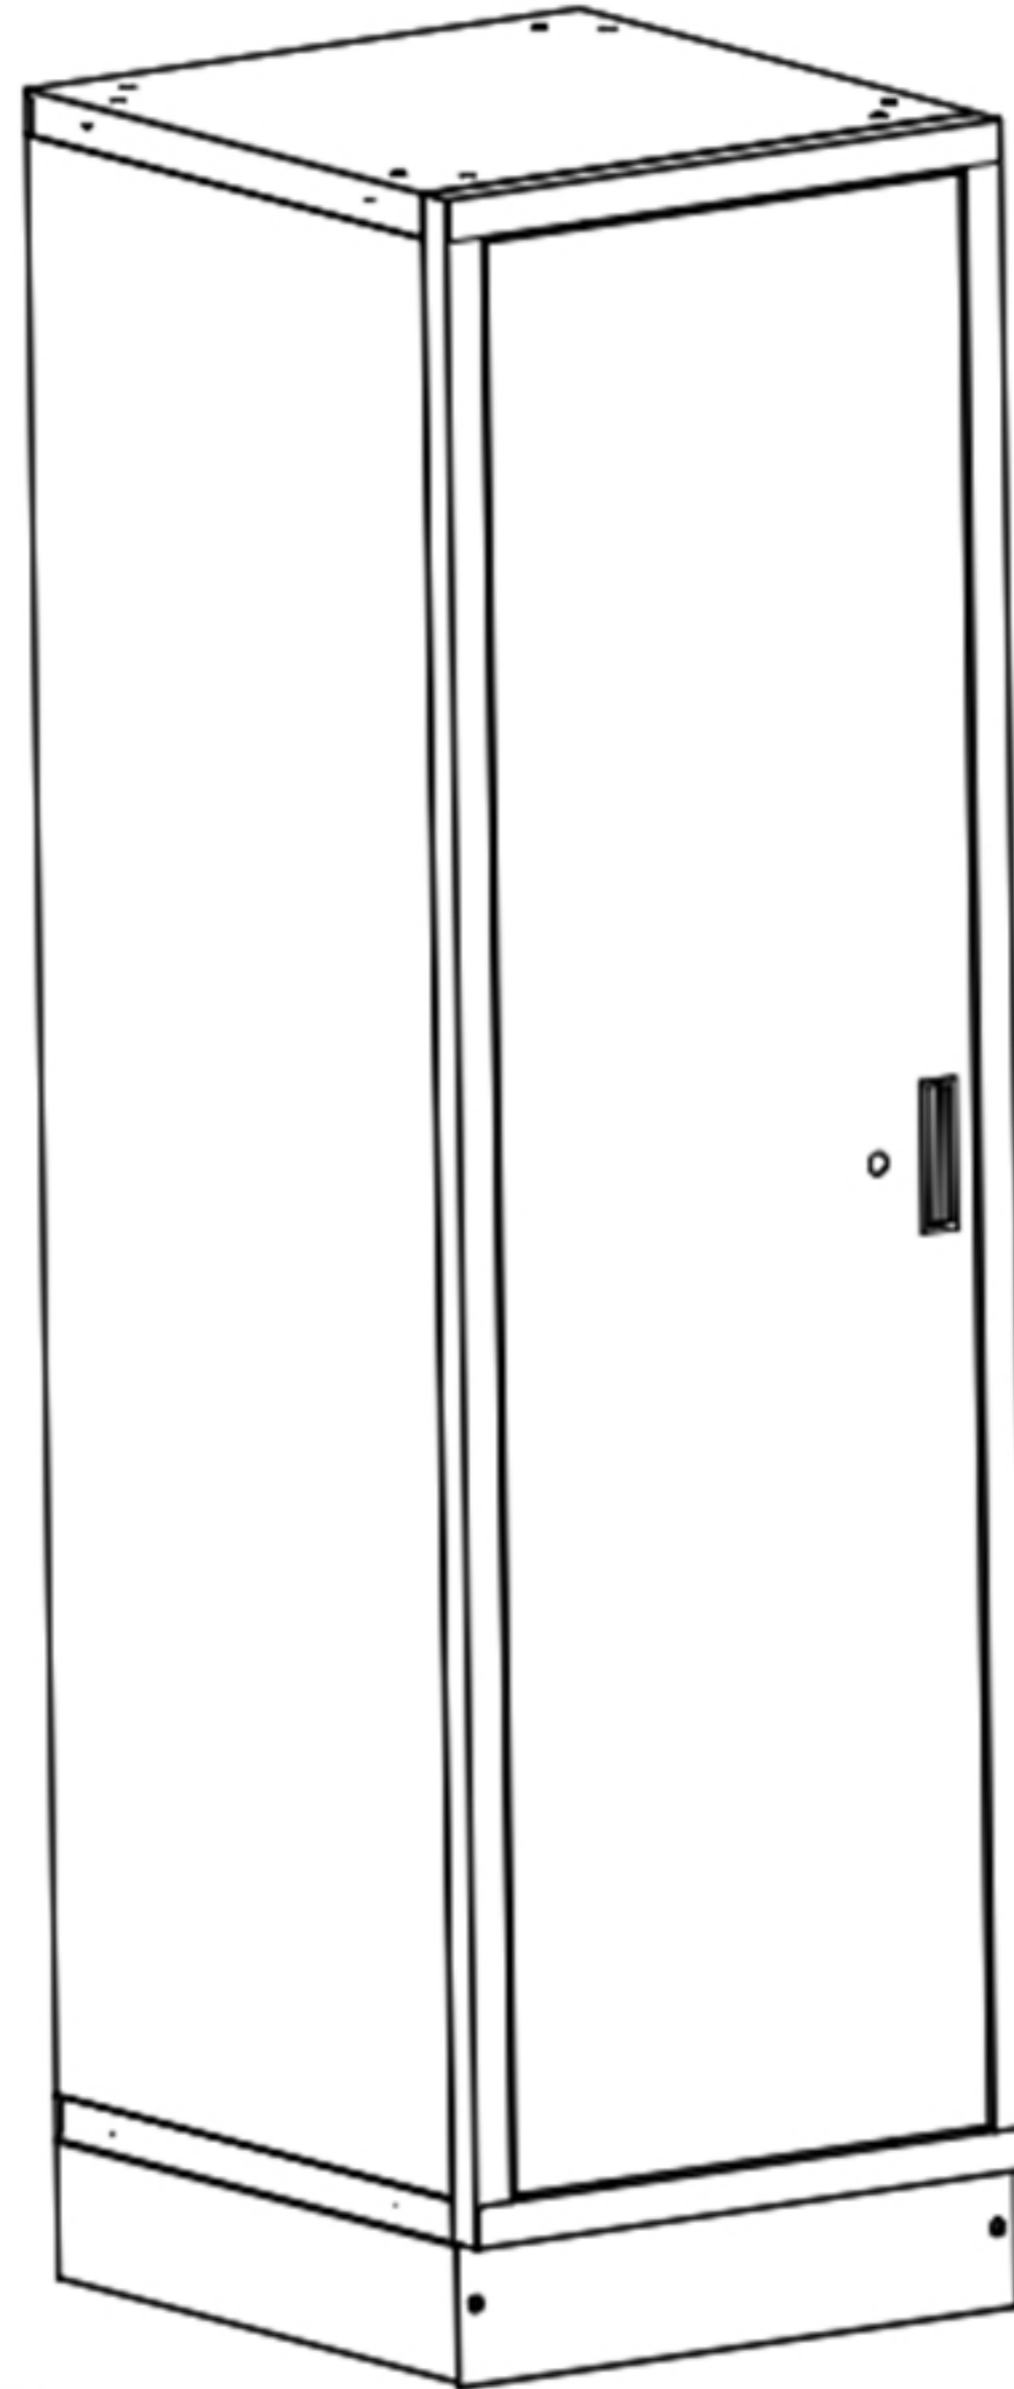

RSC50 A1

050001411



Ricambi / Spare parts

		
①	050001914	1
②	050001913	1
③	0500020XX	1*
④	050001901	1 (4 pezzi / 4pieces)

*XX=Key codes from F00 to F19

