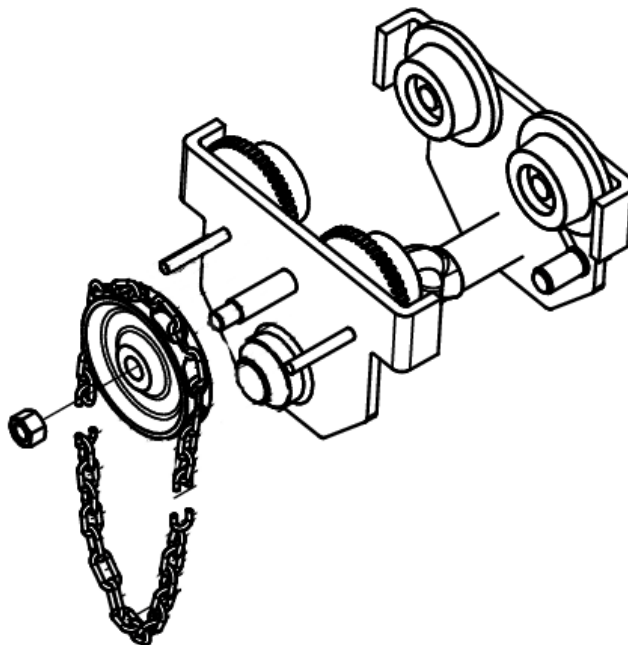


SPECIFICA PRODOTTO**ISTRUZIONI PER IL MONTAGGIO****CATENA DI MANOVRA PER CARRELLI DI TRASLAZIONE A CATENA**

Indicazioni di smaltimento imballaggi		
Simbolo		Indicazioni raccolta
		
		Raccolta plastica: buste di plastica, bottiglie di plastica, flaconi ecc...
Verifica le disposizioni del tuo comune		

La lingua originale della presente specifica è quella Italiana.

Sede produttiva **Accessori per funi ROBUR**

Zona Industriale – C.da S. Nicola


67039 SULMONA (L'AQUILA)

Tel. +39.0864.2504.1 – Fax +39.0864.253132

www.beta-tools.com – info@roburitaly.com

CODICE	CARRELLO DI TRASLAZIONE A CATENA	WLL (t)
081490600	8147C	1.0
081490600	8147C	2.0
081490600	8147C	3.0
081490600	8147C	5.0

CATENA DI MANOVRA PER CARRELLI DI TRASLAZIONE A CATENA

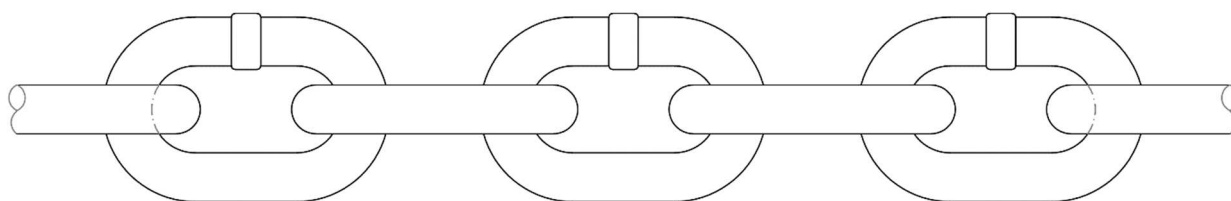

Posizionare il carrello su un piano.

Fig.1



Svitare il dado che blocca la ruota di manovra.

Fig.2




Rimuovere la ruota di manovra dall'albero di trasmissione del moto.

Fig.3




Rimuovere la catena.

Fig.4

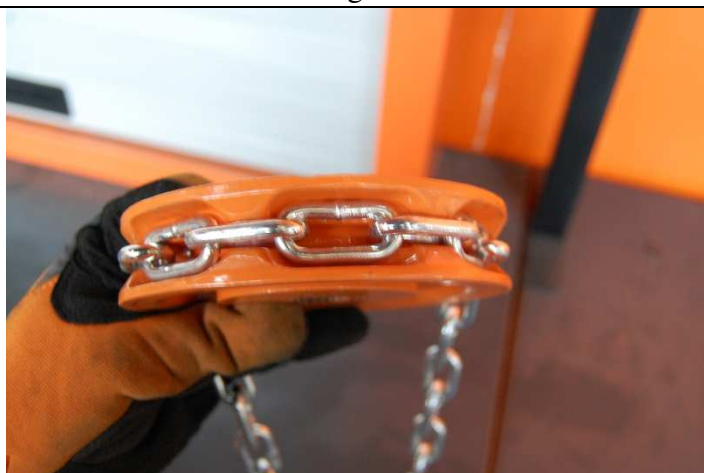


Inserire la catena con le maglie alloggiare nella giusta posizione.

Fig.5

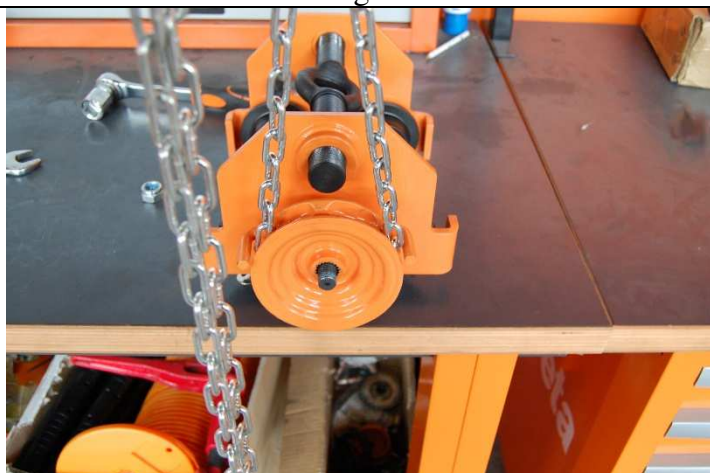


Inserire la ruota di manovra nell'albero di trasmissione del moto.

Fig.6

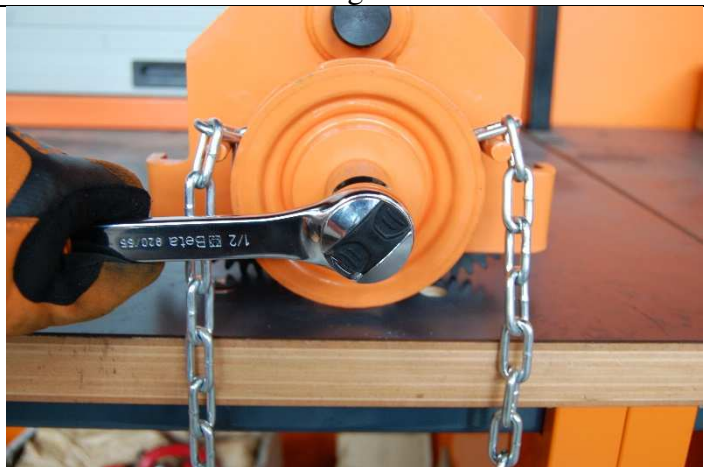

Accostare il dado autobloccante per bloccare la ruota.

Fig.7

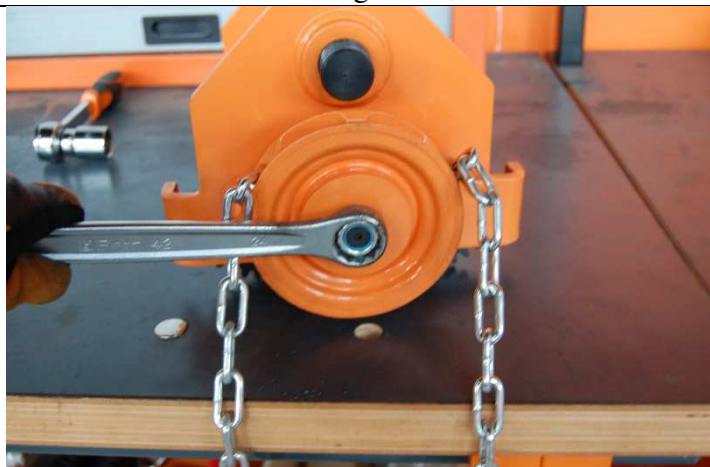


Serrare leggermente il dado per evitare oscillazioni della ruota.

Fig.8

PRODUCT SPECIFICATIONS

INSTRUCTIONS FOR ASSEMBLY

HANDLING CHAIN FOR CHAIN TROLLEYS

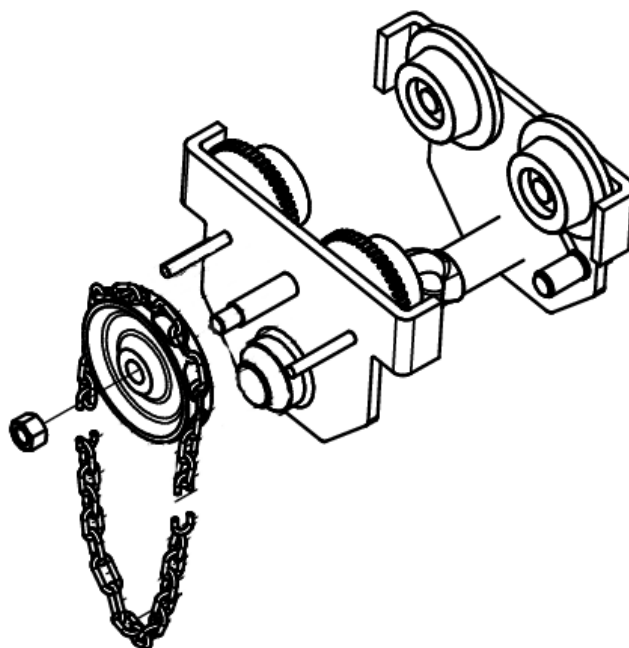

Disposal packaging instruction		
Simbology		Collection indication
		
		Plastic collection: plastic bags, plastic bottle, vials etc..
Check the provisions of your country.		

The original language of this technical specification is Italian

Manufacturing site **ROBUR wire rope accessories**

Zona Industriale – C.da S. Nicola


I-67039 SULMONA (L'AQUILA)

Tel. +39.(0)864.2504.1 – Fax +39.(0)864.253132

www.beta-tools.com – info@roburitaly.com

CODE	CHAIN TRANSLATION TROLLEYS	WLL (t)
081490600	8147C	1.0
081490600	8147C	2.0
081490600	8147C	3.0
081490600	8147C	5.0

HANDLING CHAIN FOR CHAIN TRANSLATION TROLLEYS

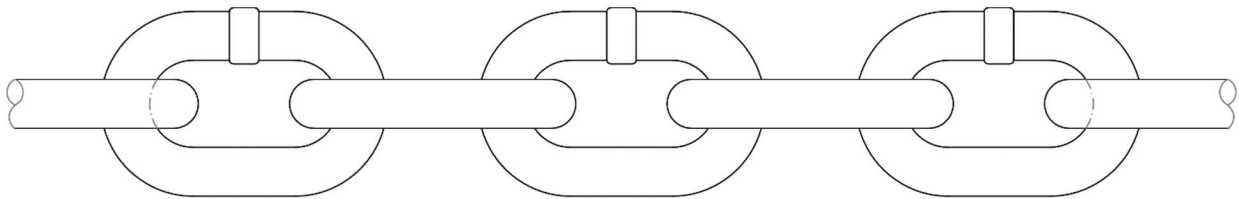


Place the trolley on flat surface.

Fig.1



Unscrew the nut that lock the operating wheel.

Fig.2

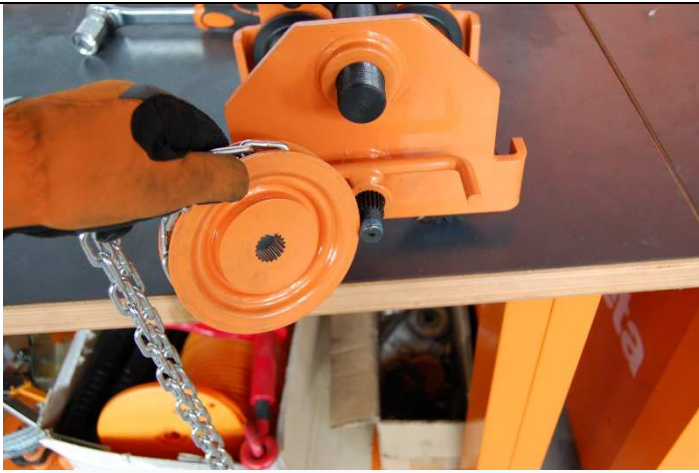

Remove the operating wheel from the motion trasmission shaft.

Fig.3



Remove the chain.

Fig.4




Insert the chain with the links house in the right position.

Fig.5




Insert the operating wheel in the

Fig.6

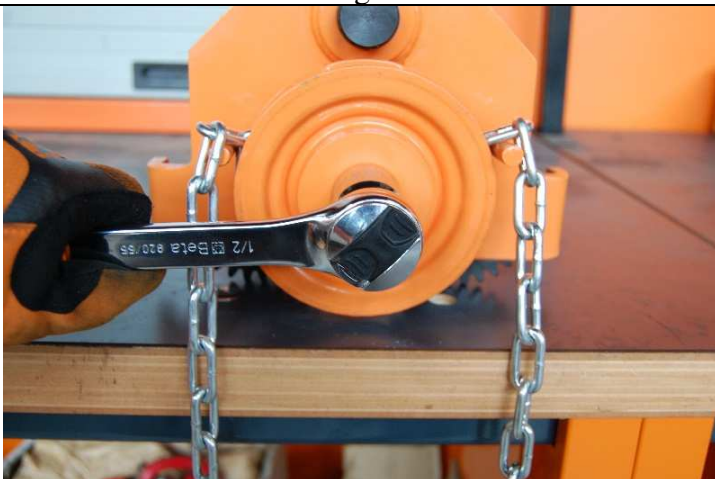

Approch the self locking nut to lock the operating wheel.

Fig.7

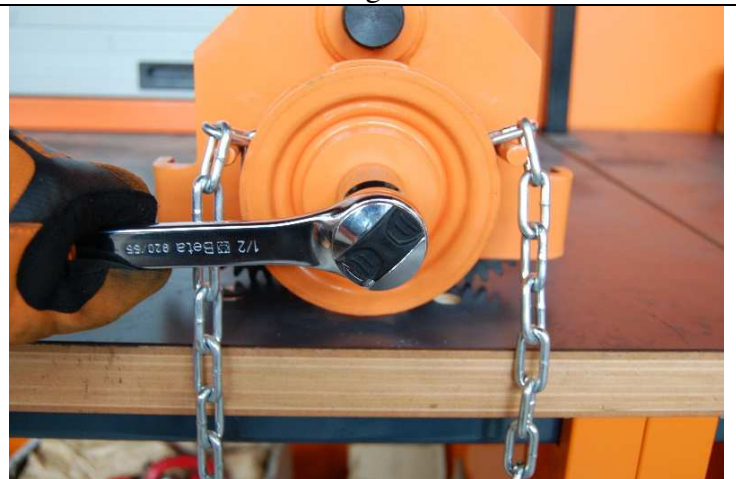

Tighten the nut slightly to prevent the wheel from wobbling.

Fig.8