



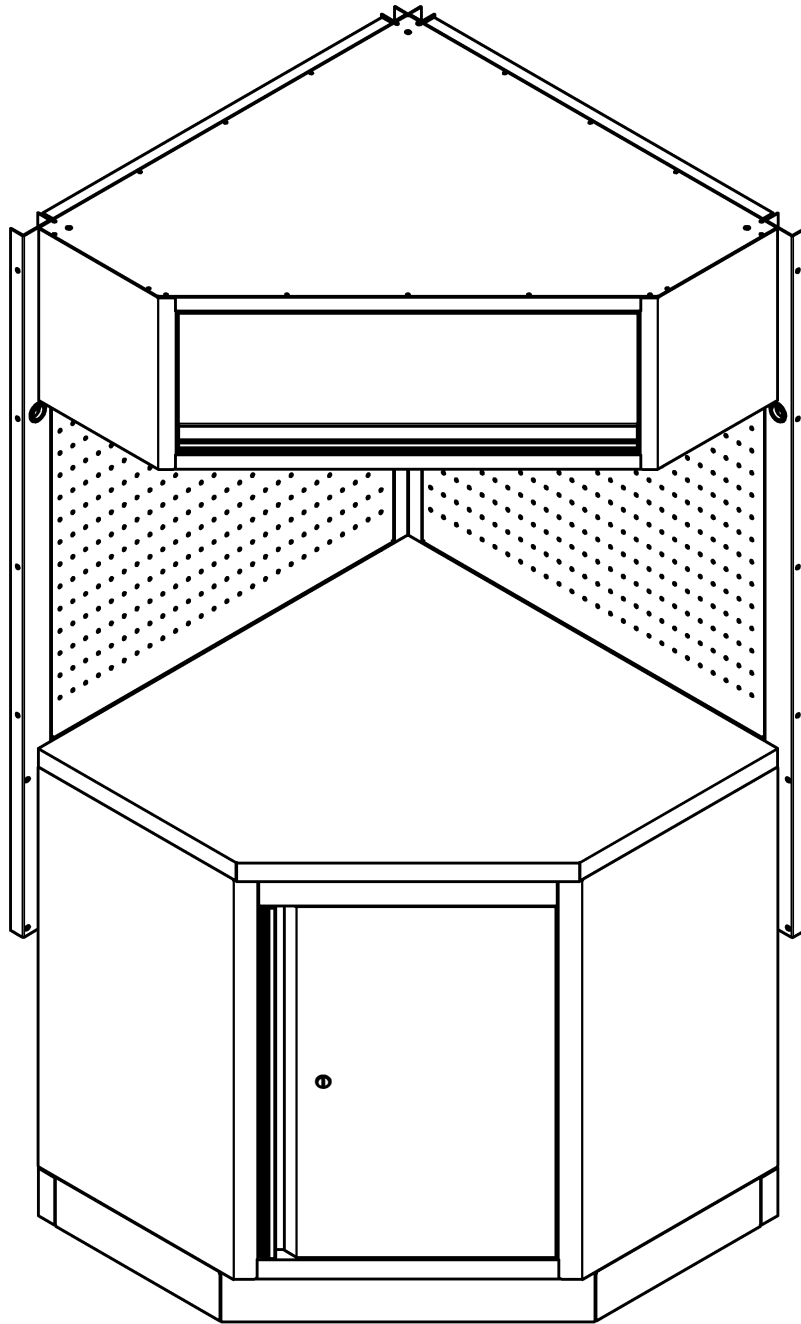


C45CORNER/ X
C45CORNER/ W

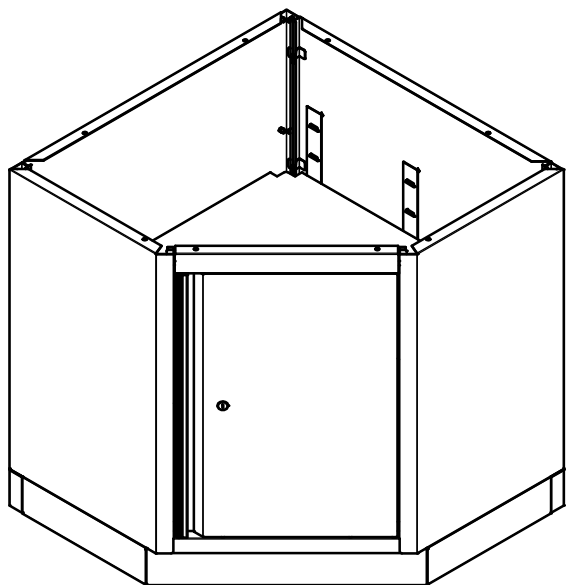


045000430




045000420

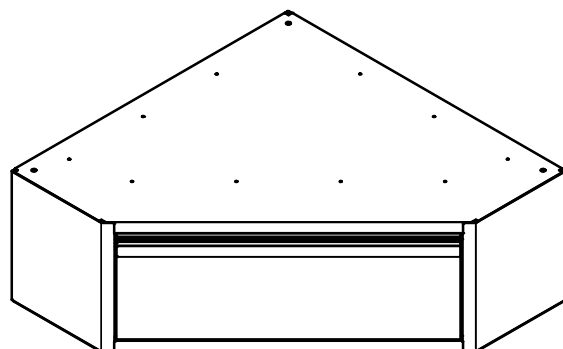


045000425

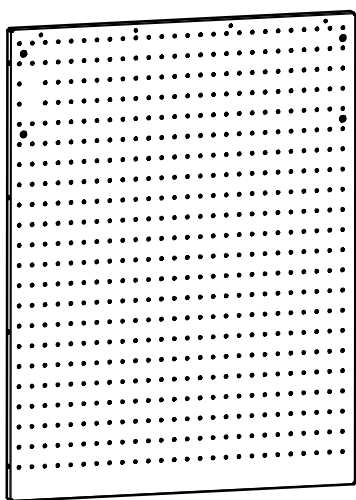


045000440 X
045000445 W

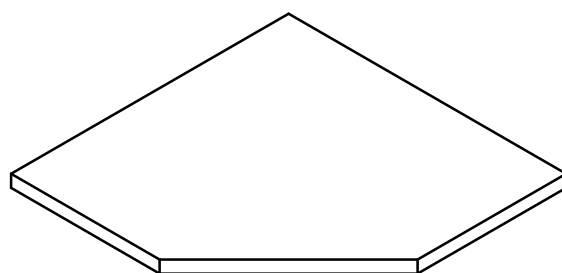

045000365




045000332




ISTRUZIONI DI MONTAGGIO

ASSEMBLY INSTRUCTIONS

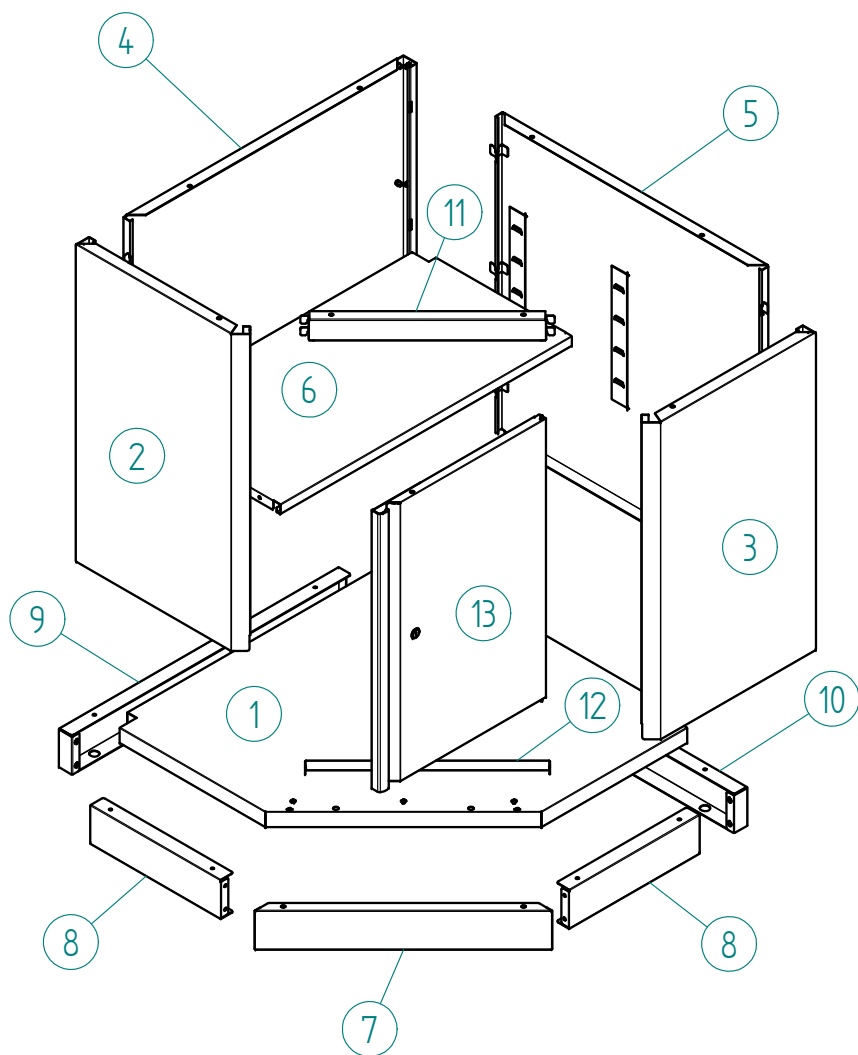

NO.	DESCRIZIONE DESCRIPTION		QTY.
A	Viti Screws	ST6×12	21+1
B	Bulloni Bolts	M6×12	16





A




B


STEP 1

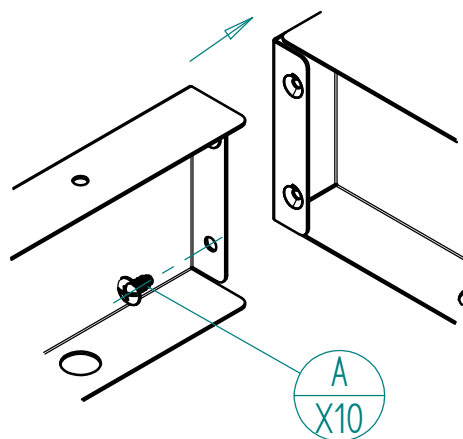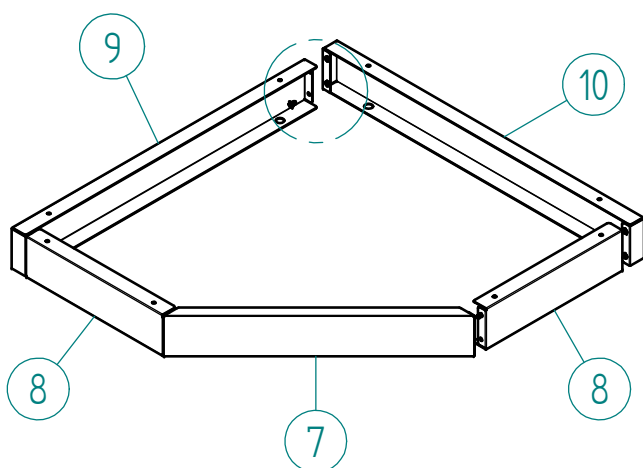


STEP 2

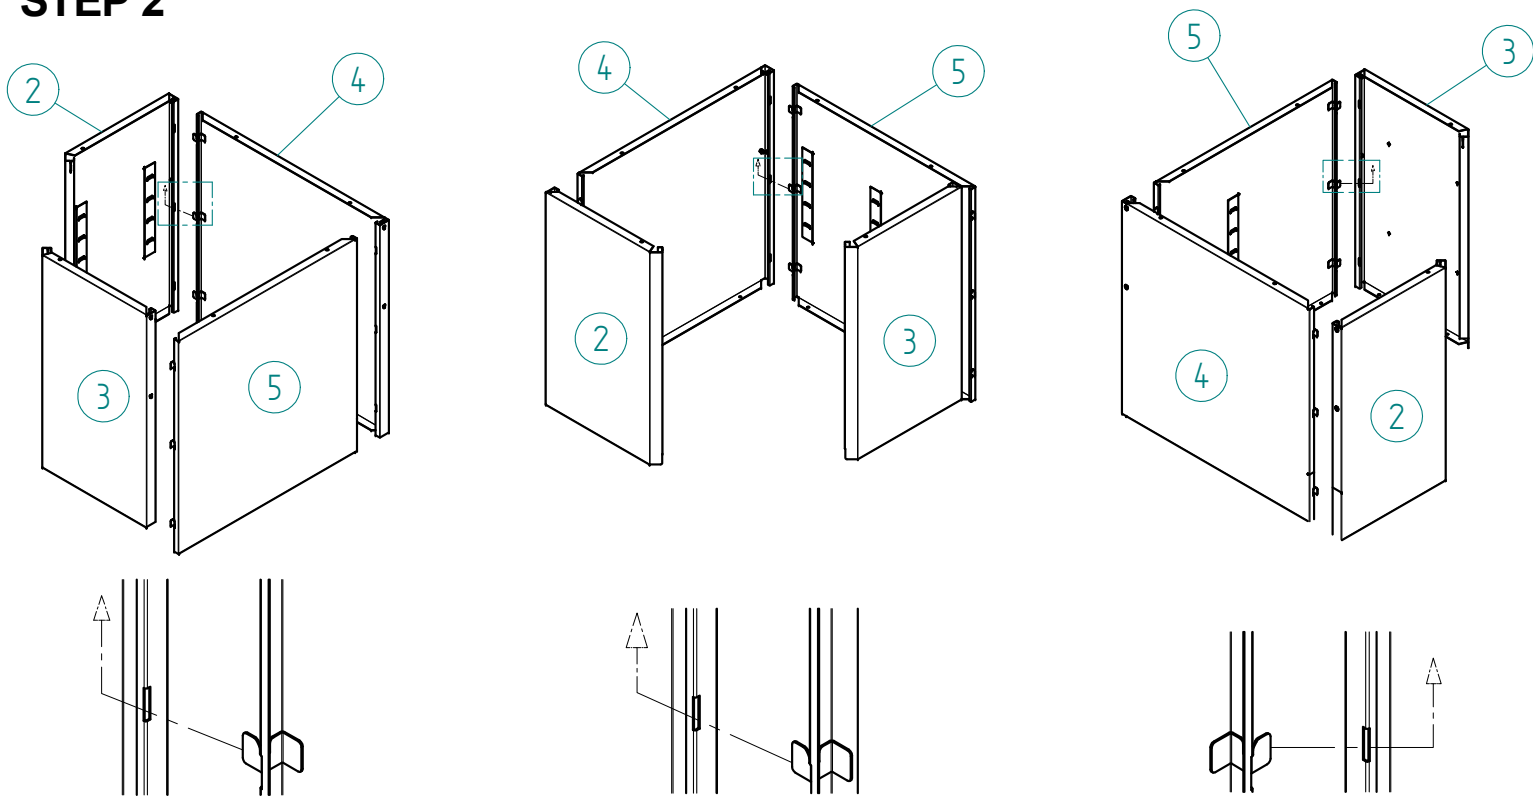


STEP 3

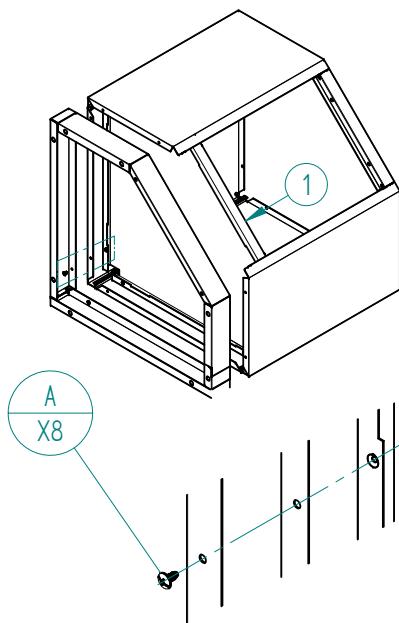


STEP 4

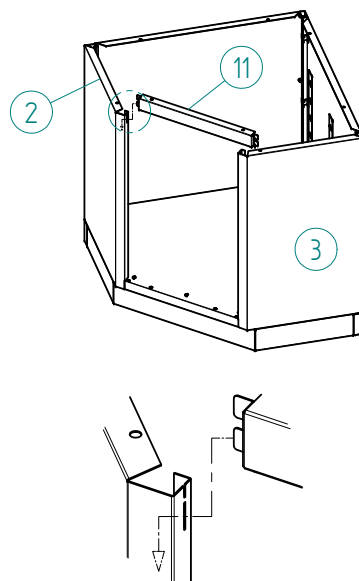


STEP 5

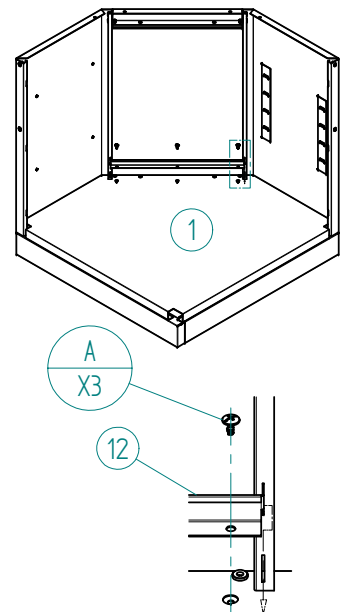


STEP 6

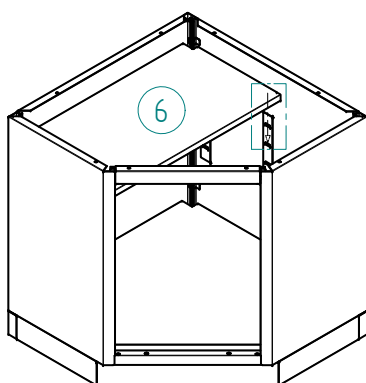


STEP 7

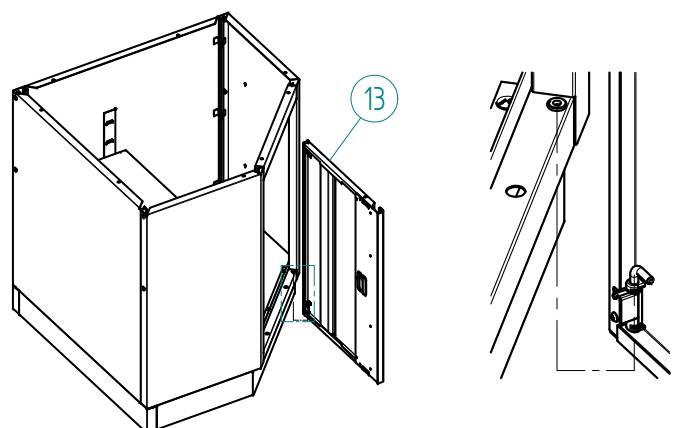


STEP 8

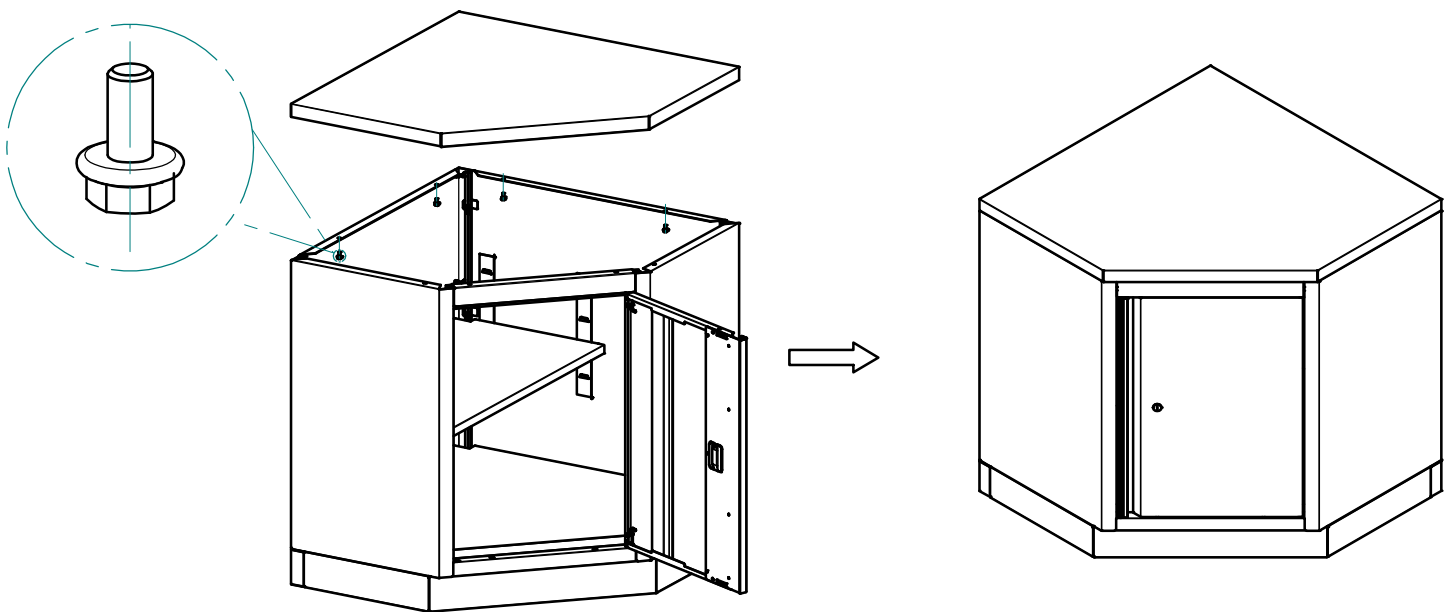

STEP 9

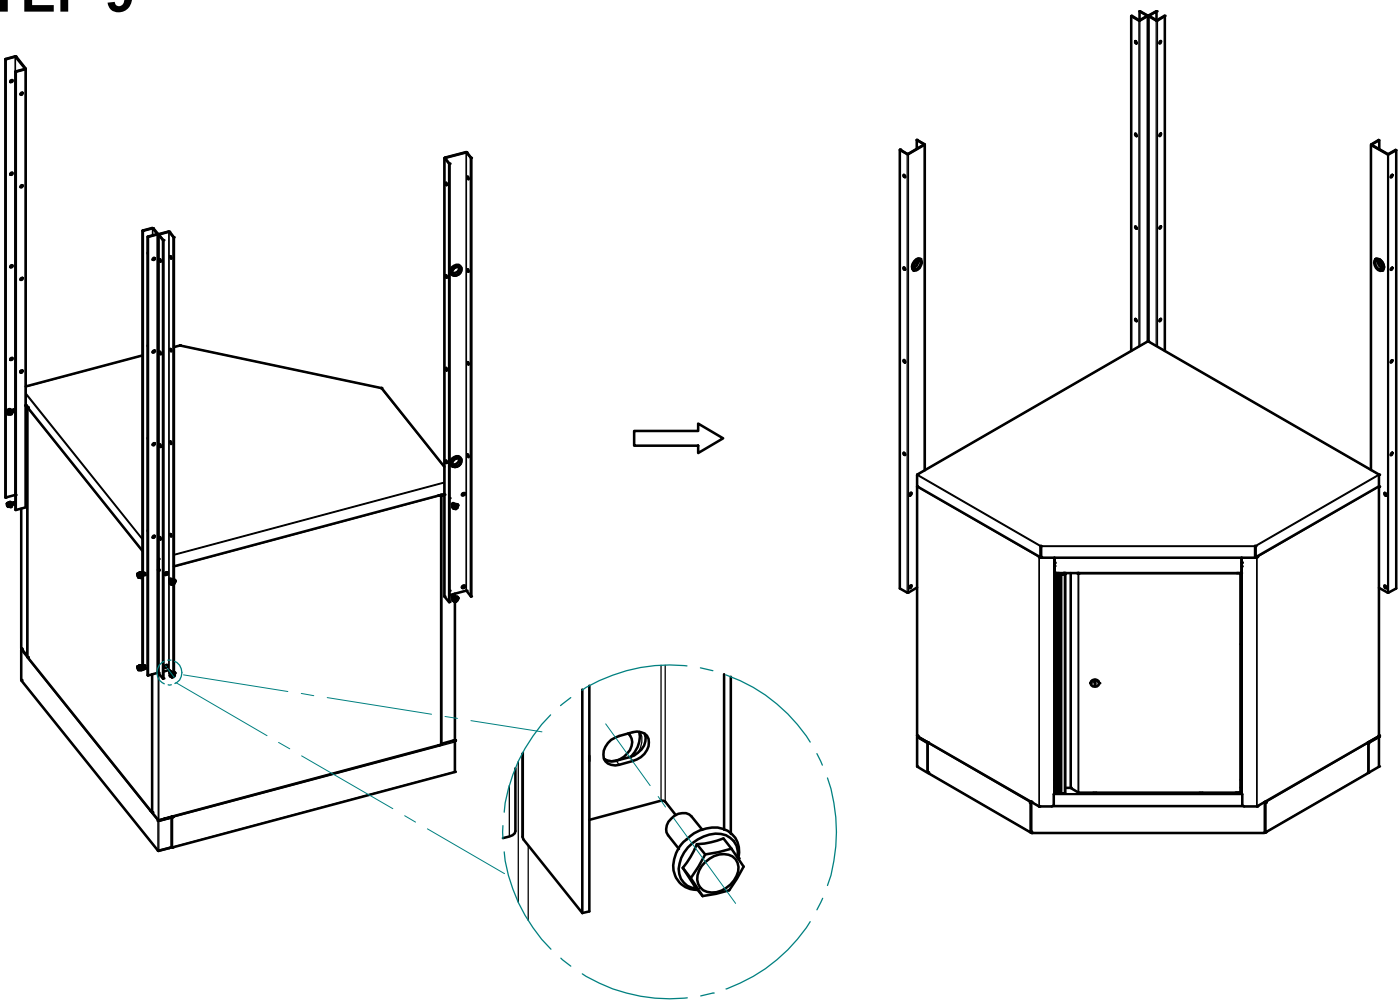

STEP 10

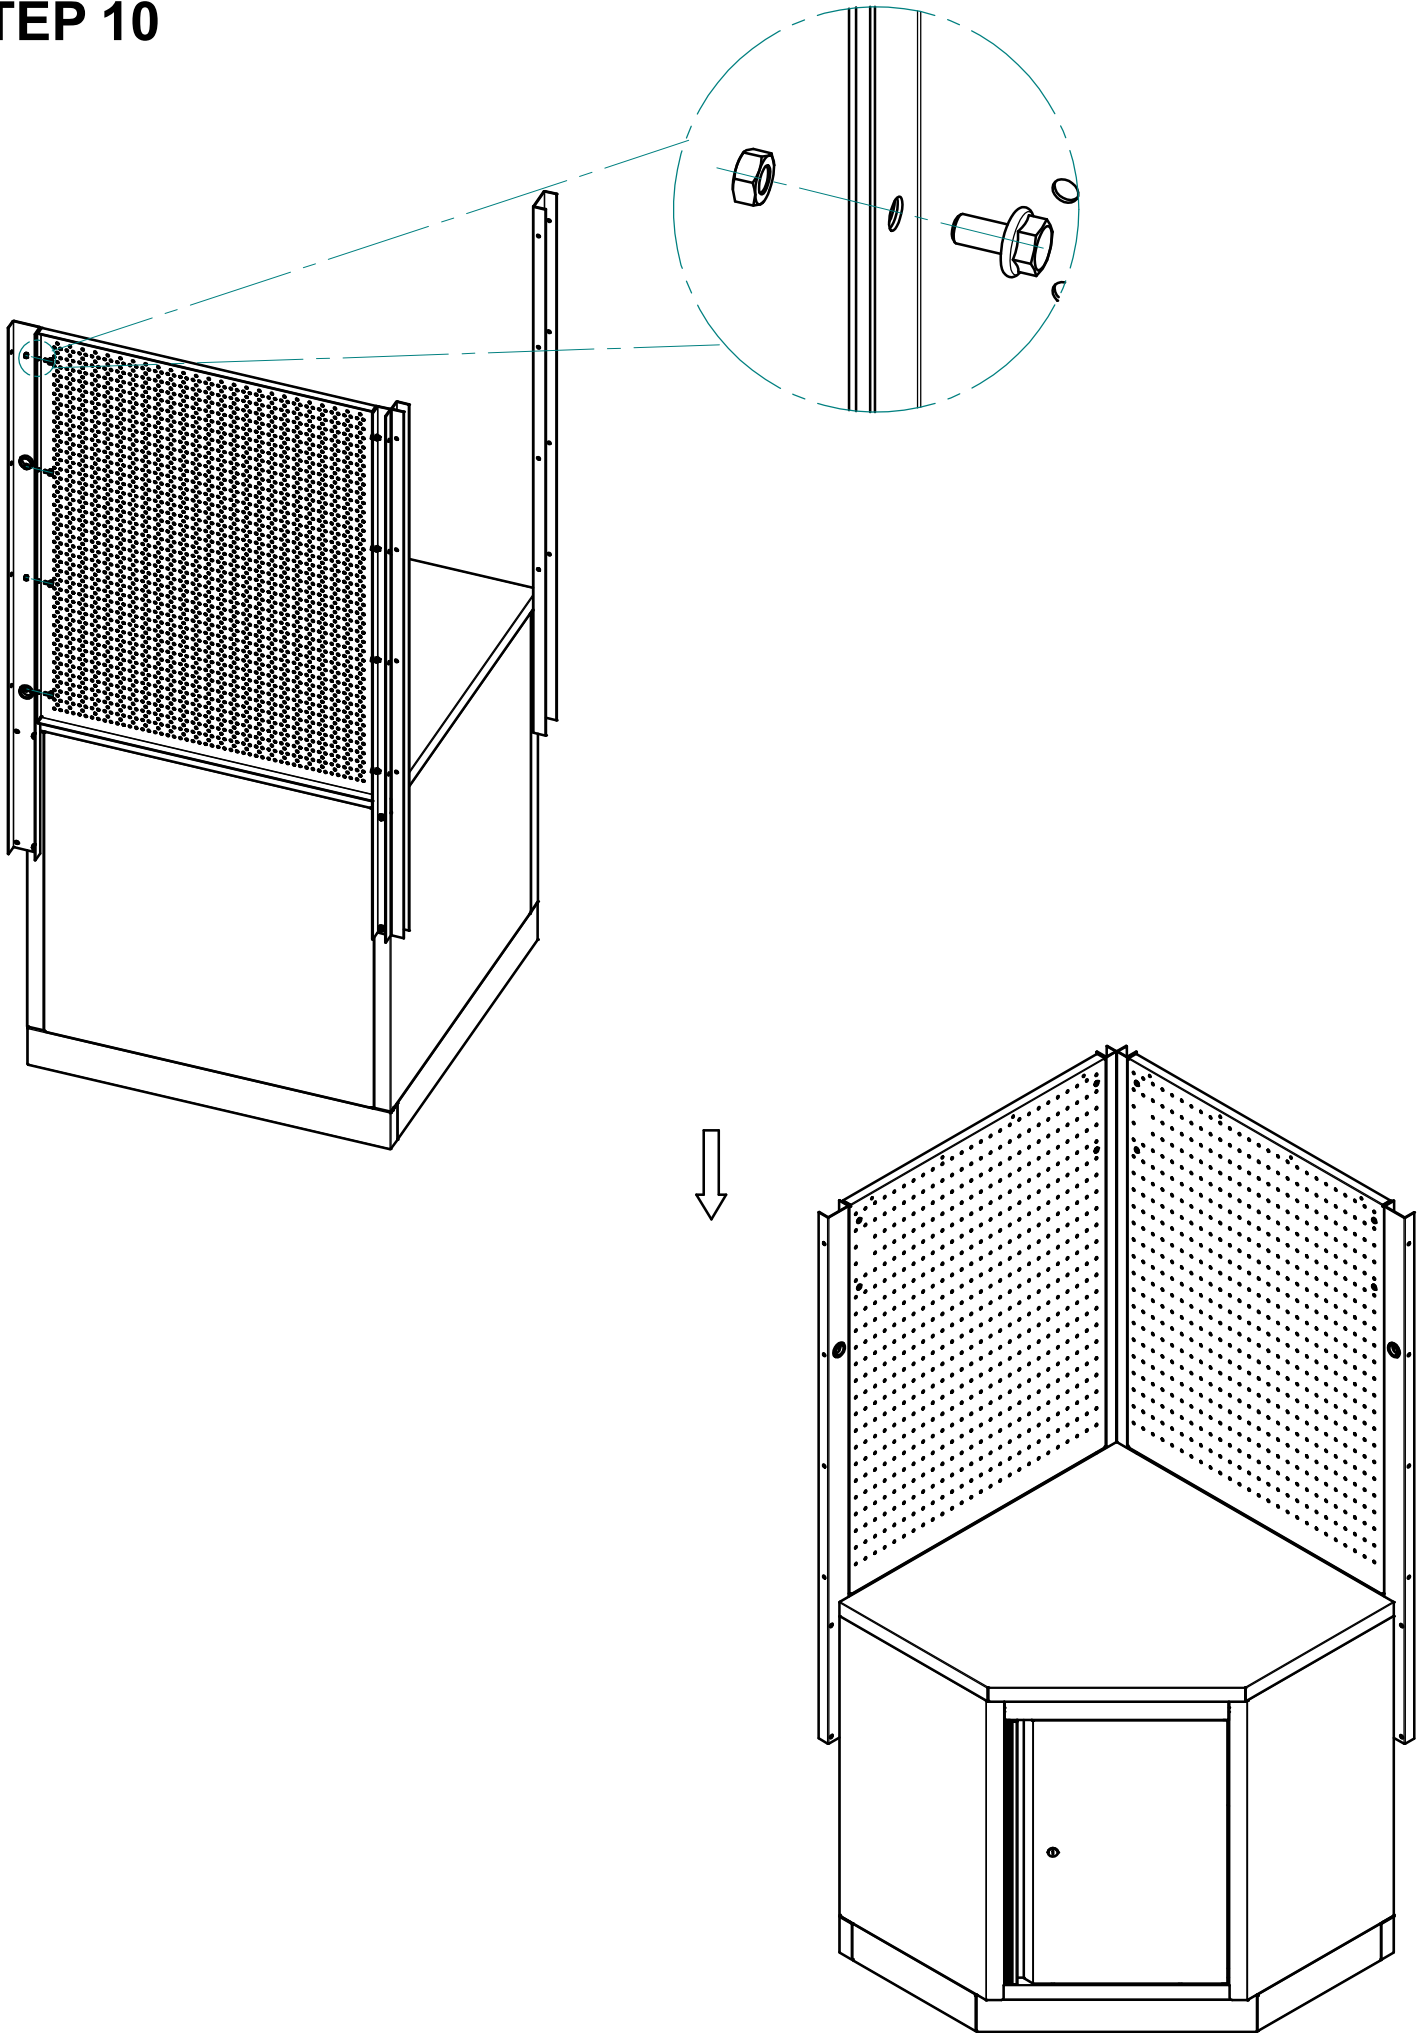

STEP 11

