


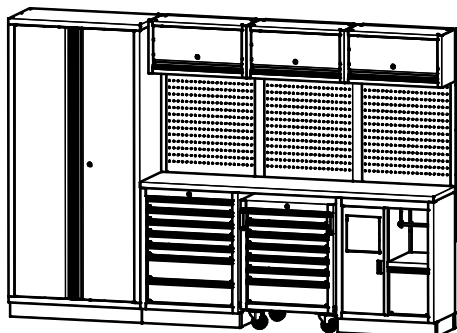


C45




045000010
045000020




045000030
045000040

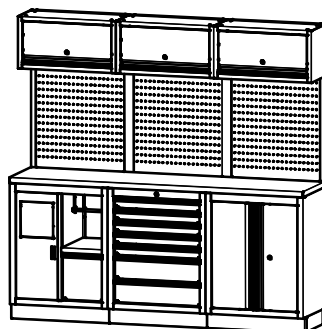


045000043
045000053

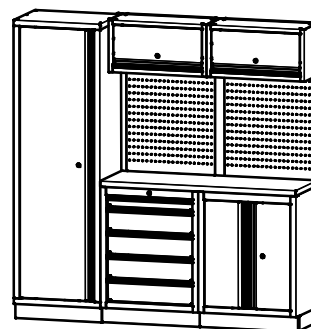


045000063
045000073

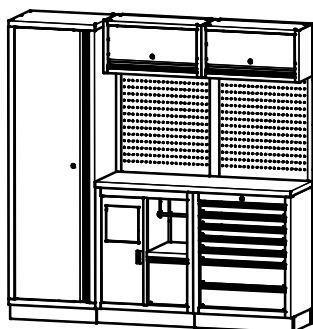


045000083
045000093

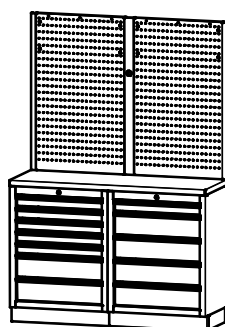


045000090
045000100

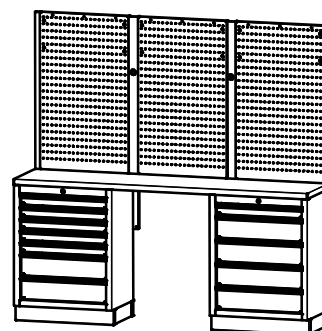


045000460

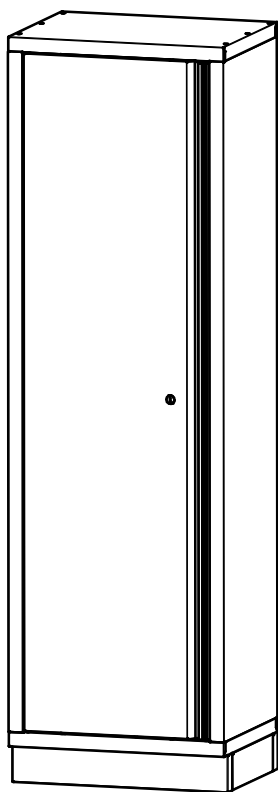


045000215

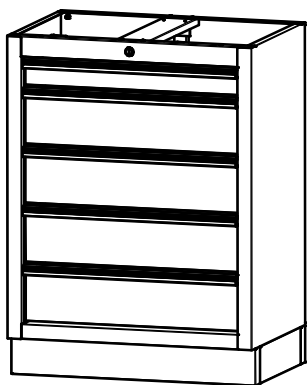


045000212

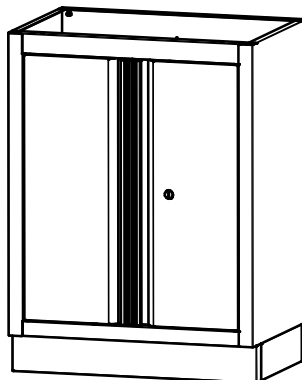


045000217

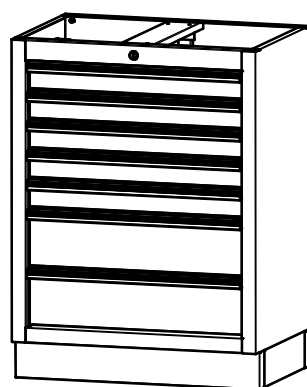


045000311

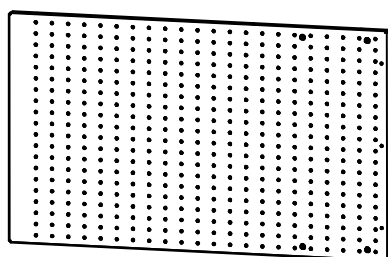


045000113
045000103




045000490

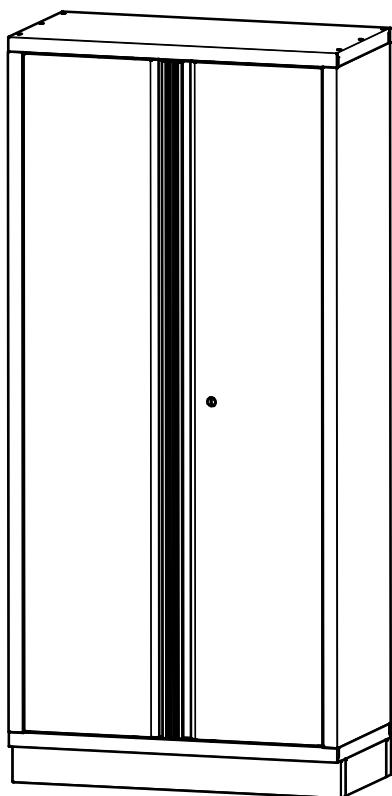


045000219

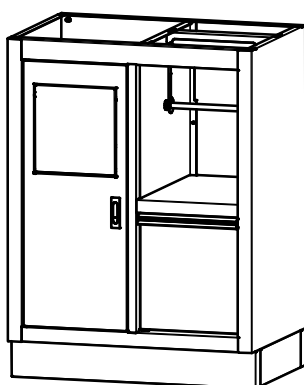

045000207

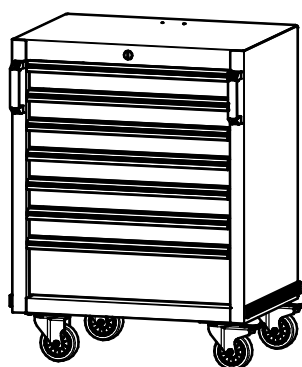

045000301

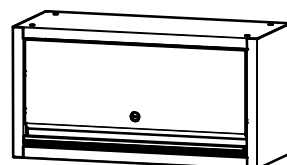

045000020
045000110



045000365





045000332





CASTERS ASSEMBLE

045000207

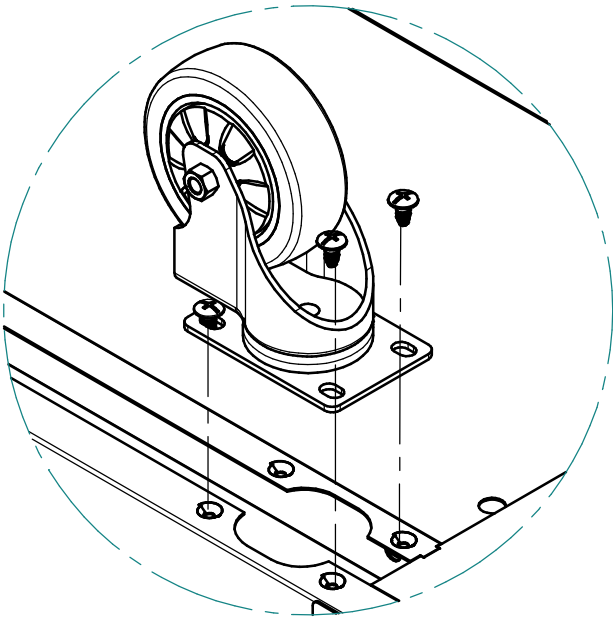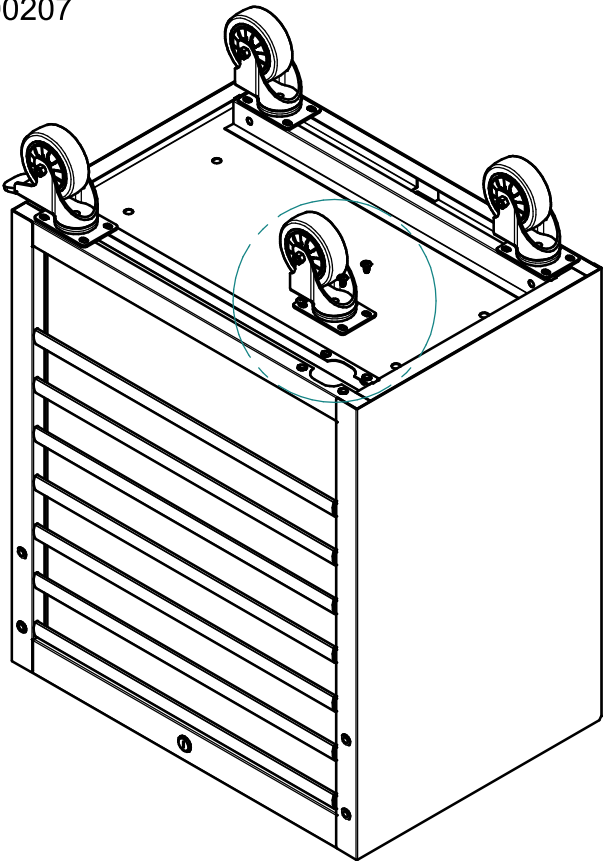


HANDLE FIX


045000207

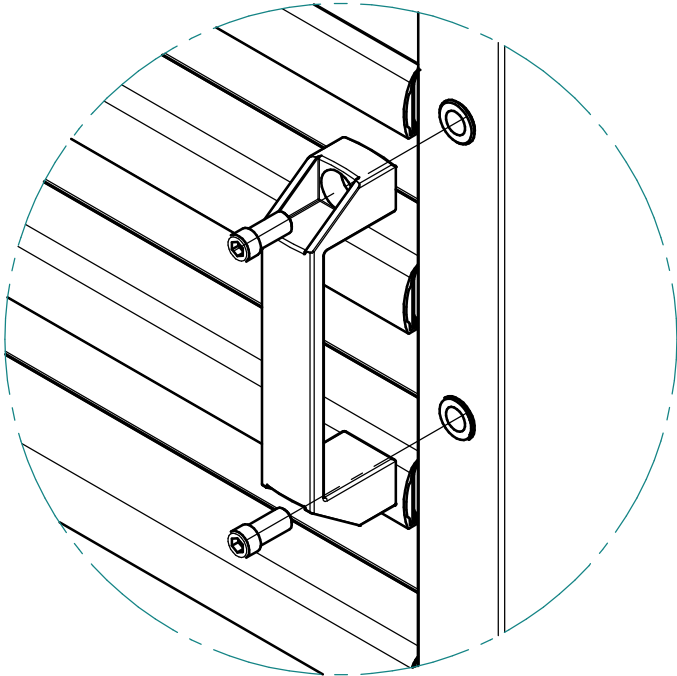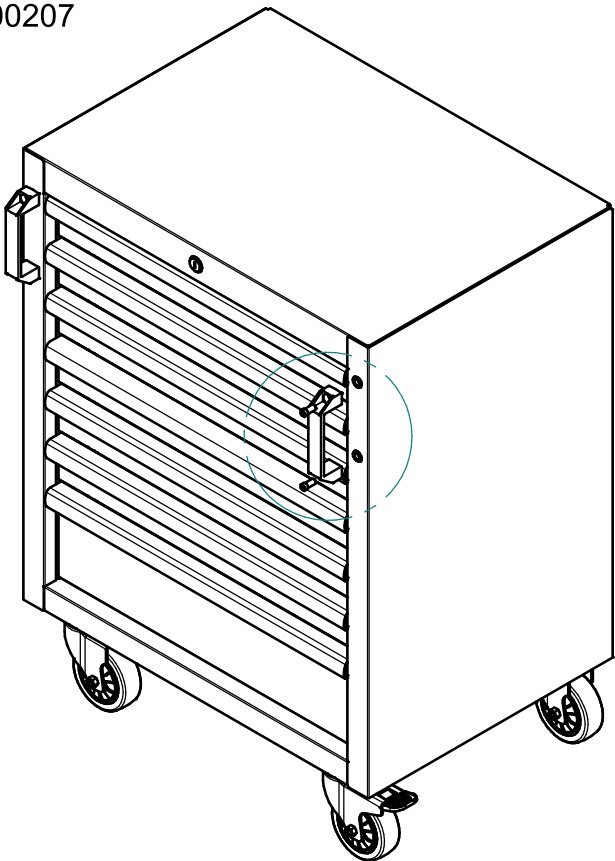


STEP 1

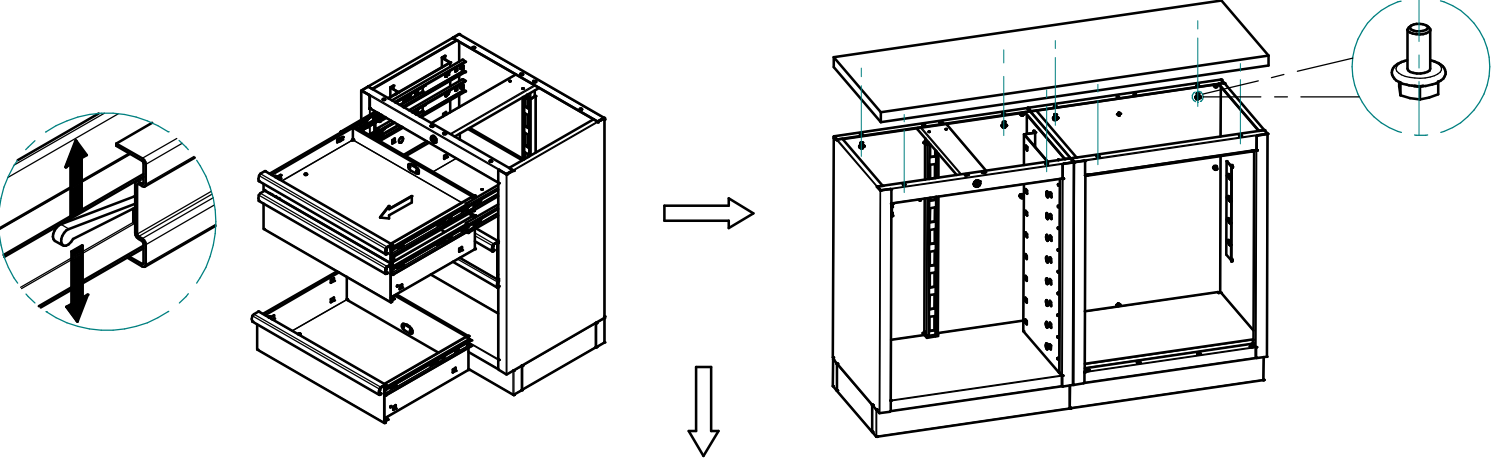


045000010
045000020

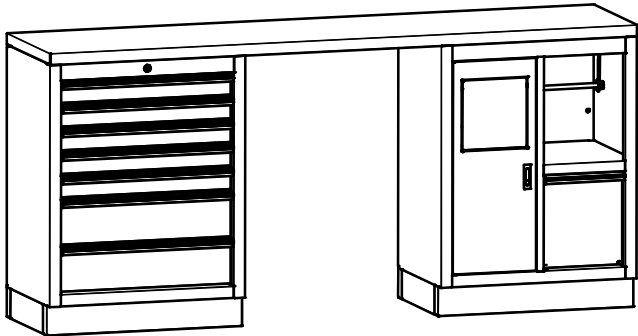


045000030
045000040

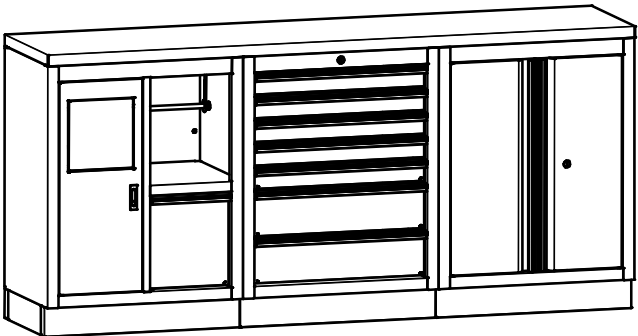


045000043
045000053

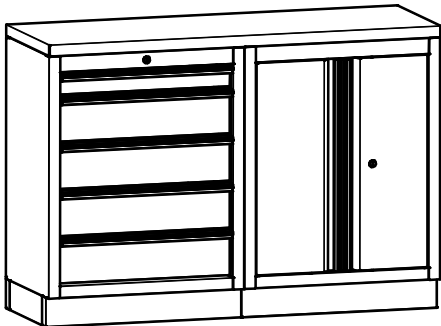


045000063
045000073

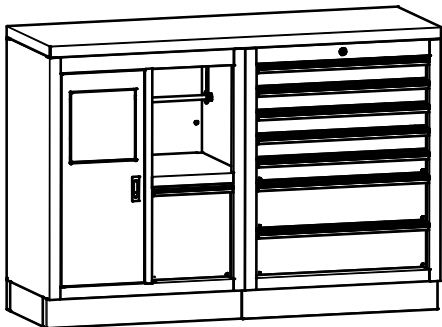


045000083
045000093

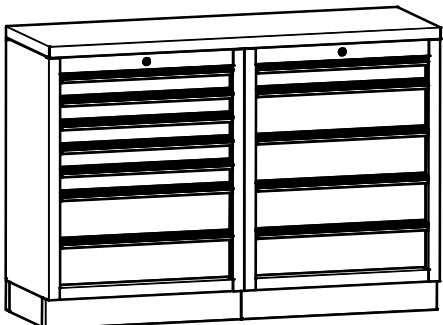


045000090
045000100

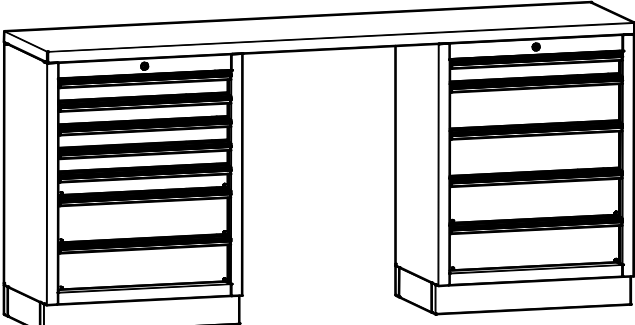


STEP 2

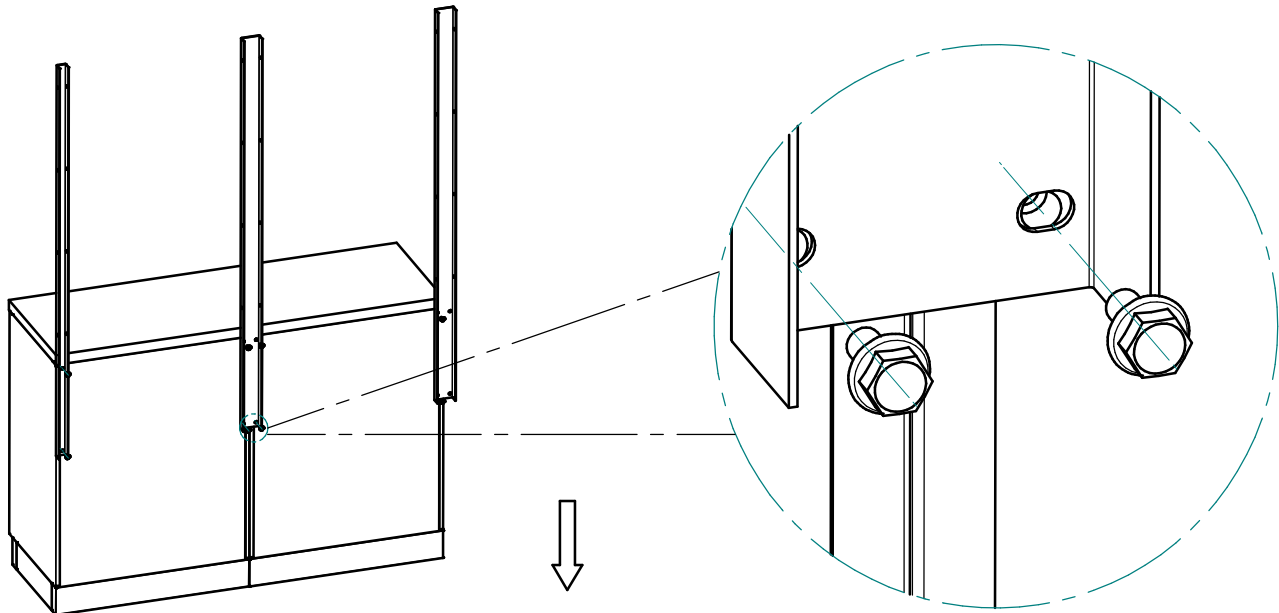


045000010
045000020

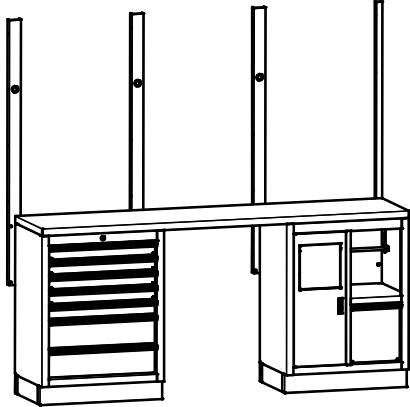


045000030
045000040

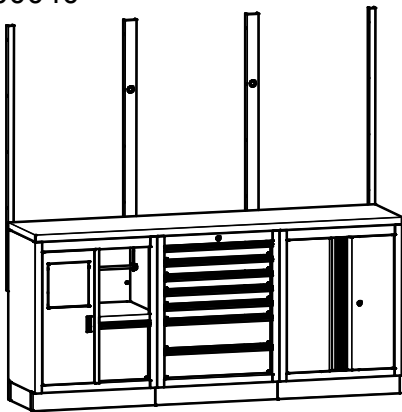


045000043
045000053

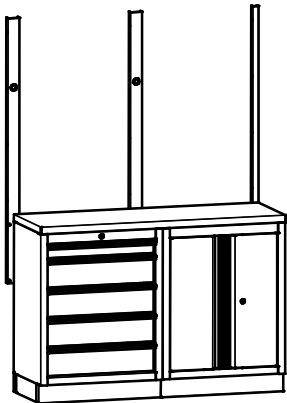


045000063
045000073

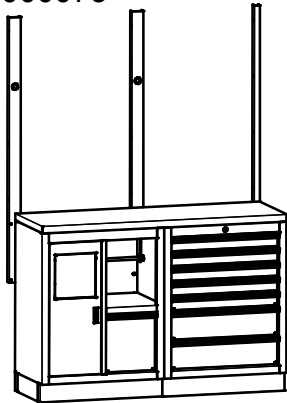


045000083
045000093

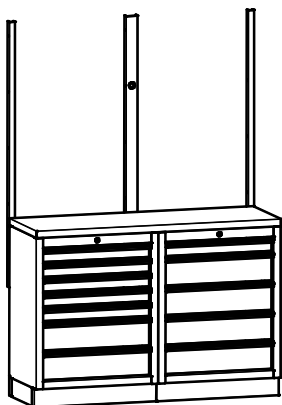


045000090
045000100

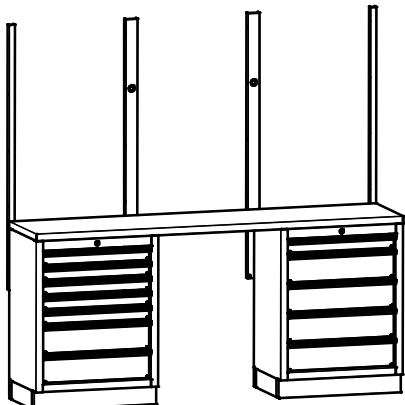


STEP 3

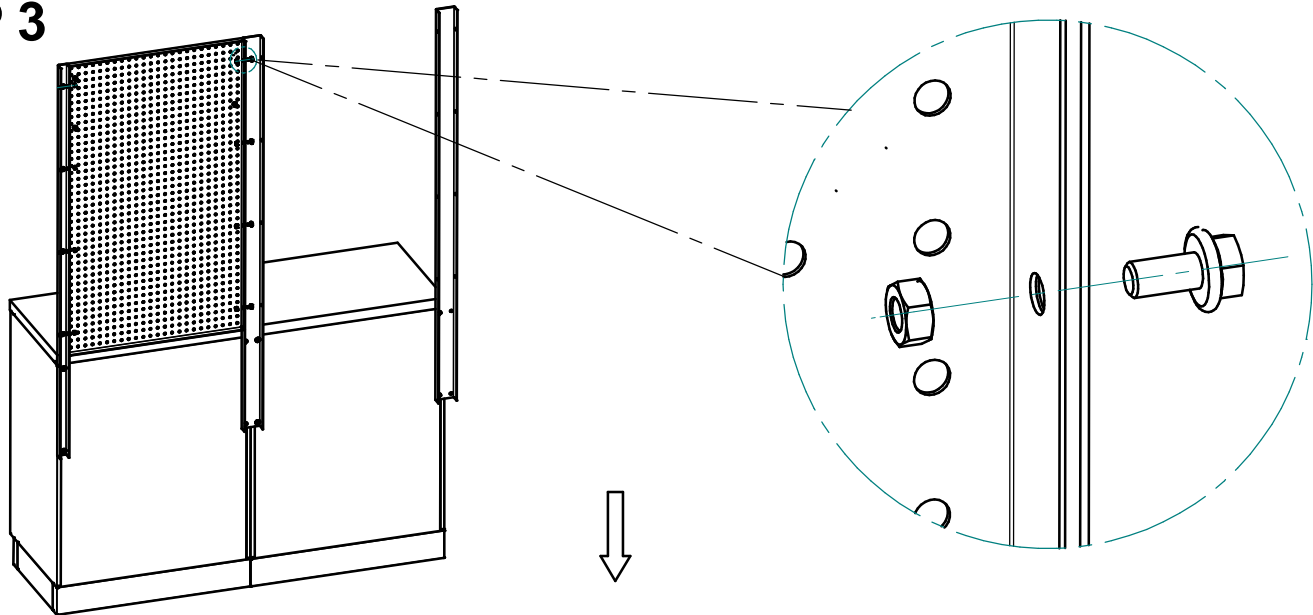


045000010
045000020

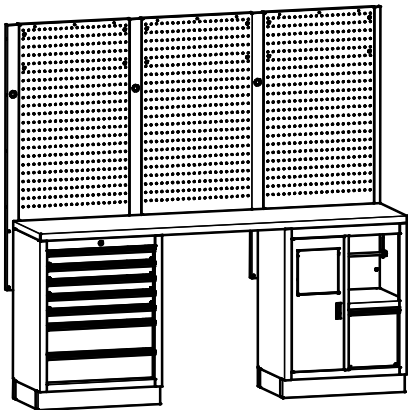


045000030
045000040

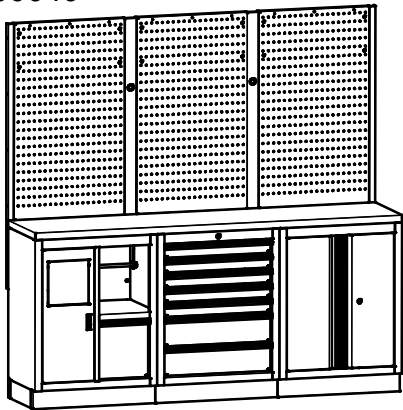


045000043
045000053

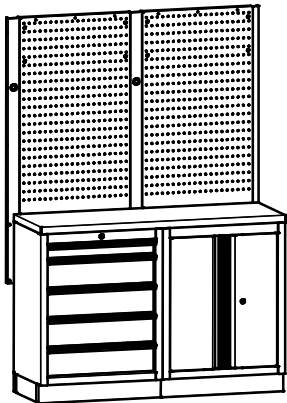


045000063
045000073

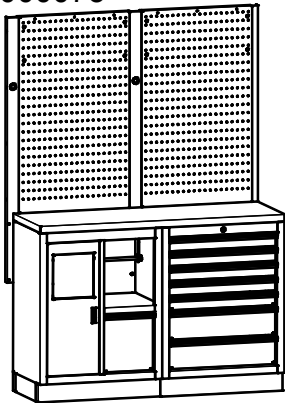


045000083
045000093

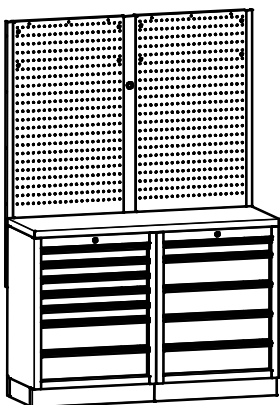

045000090
045000100

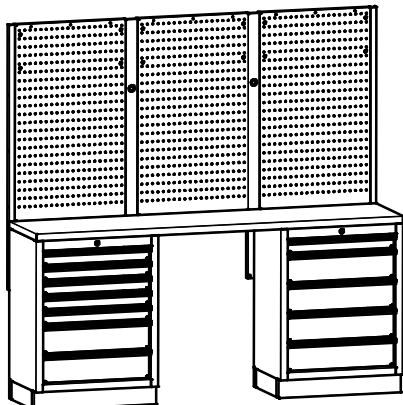


STEP 4

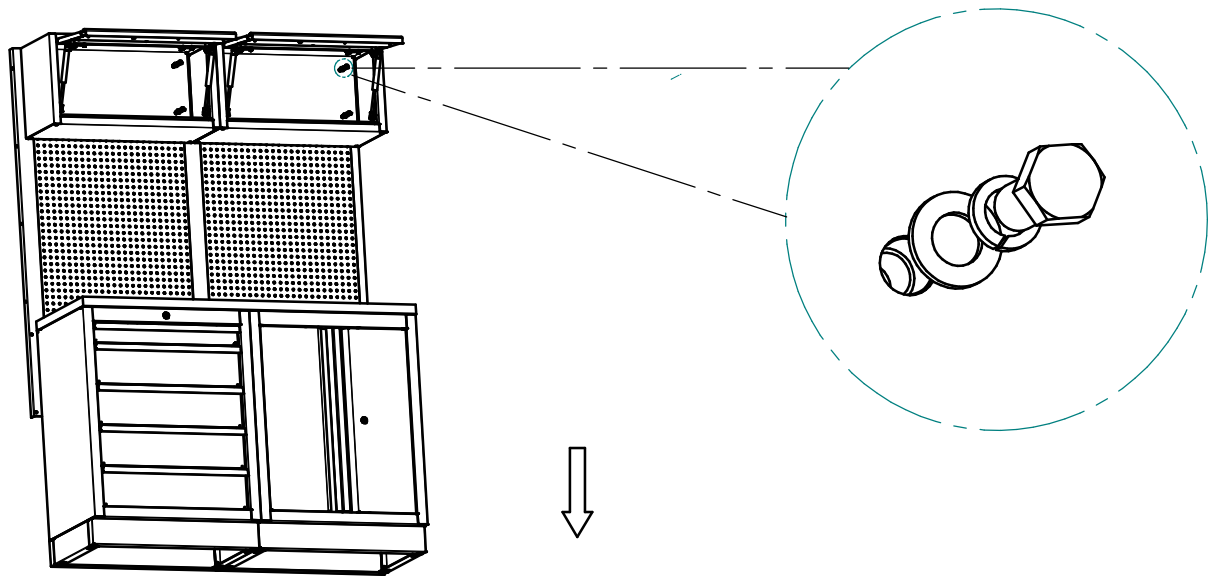


045000010
045000020



045000030
045000040

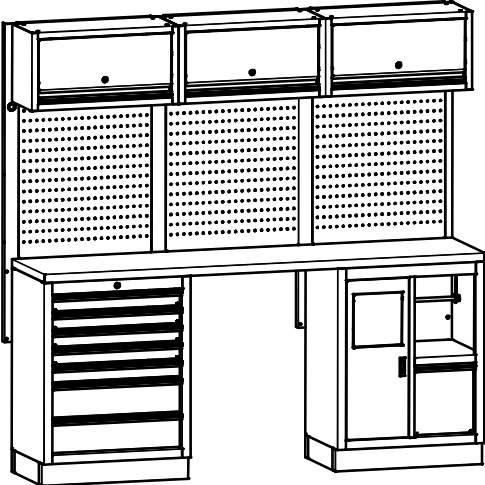



045000043
045000053

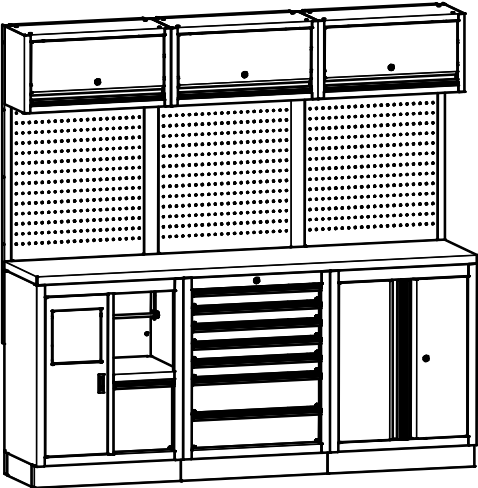


045000063
045000073

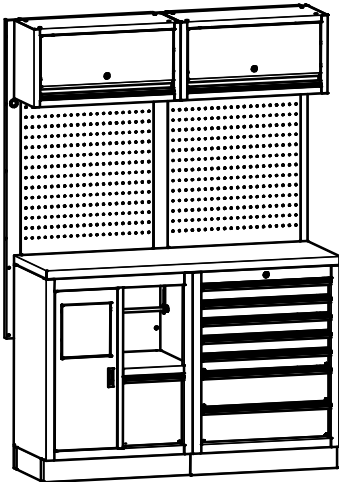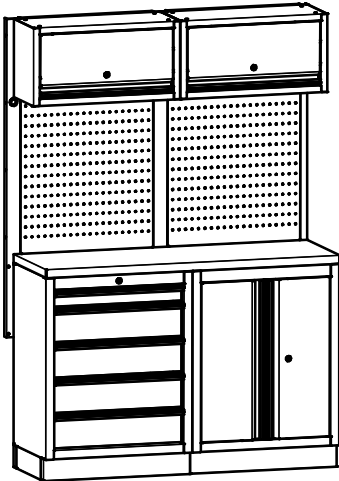

STEP 5

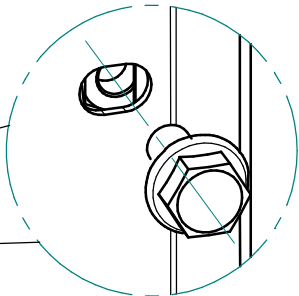
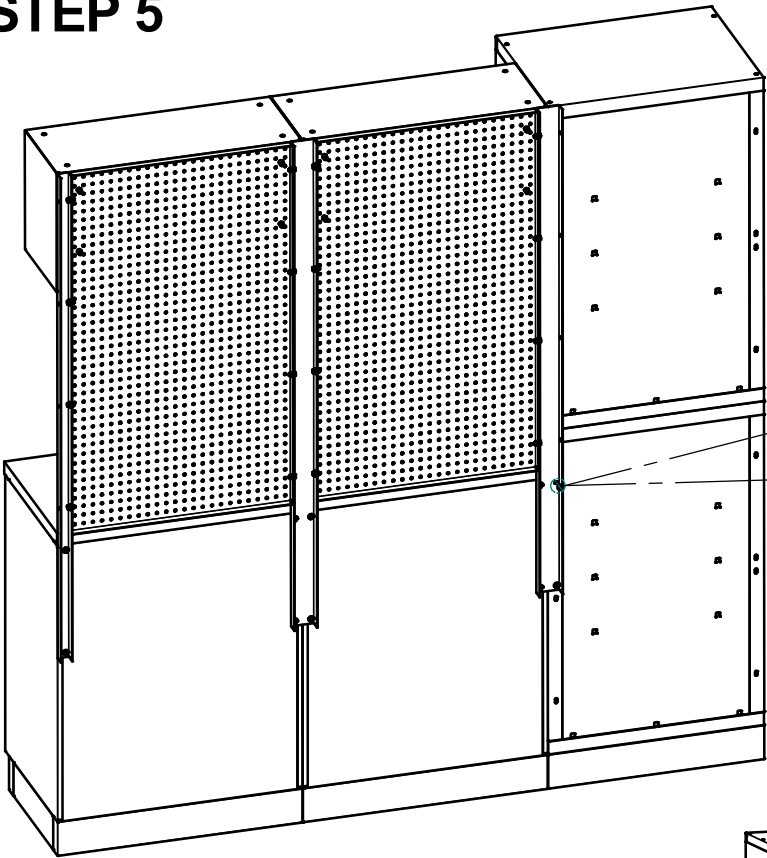


045000010
045000020

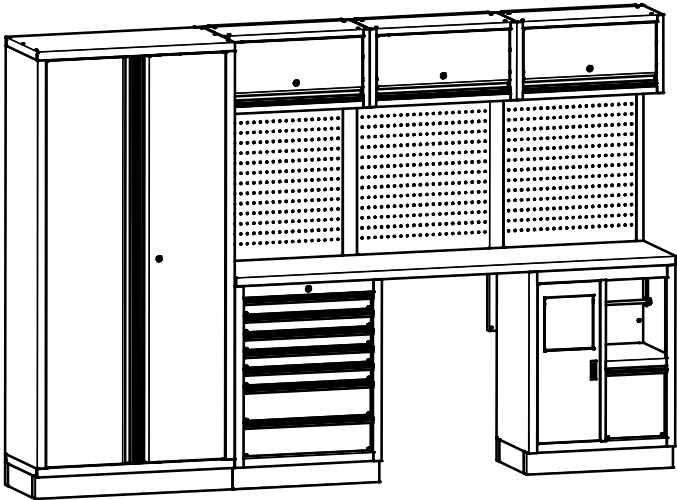


045000043
045000053

045000063
045000073

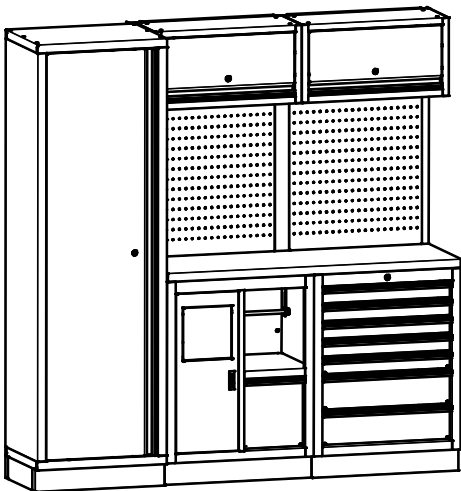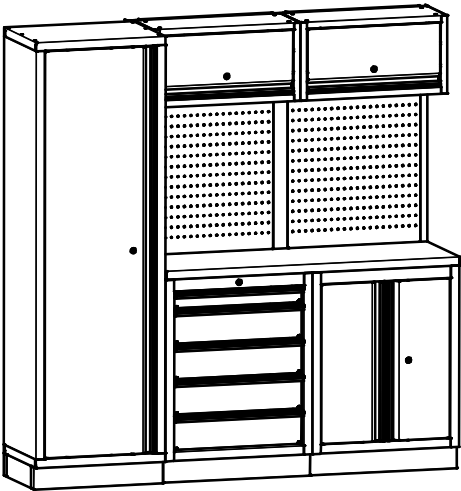

STEP 6

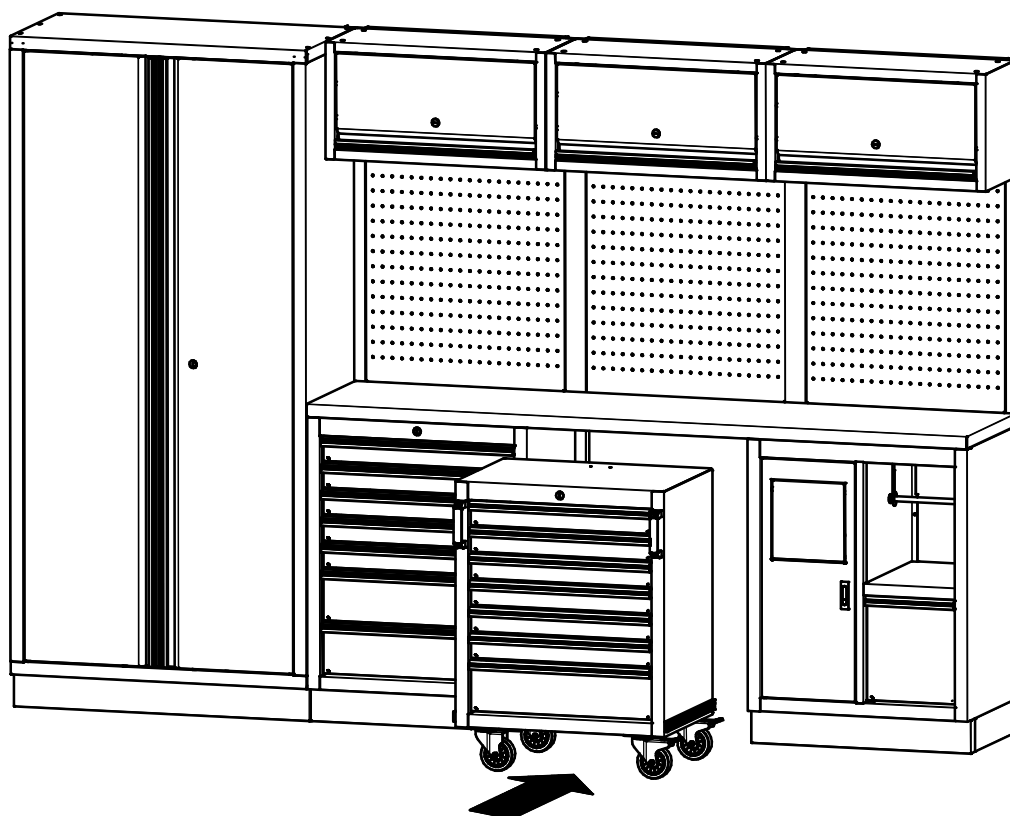

045000010
045000020

